
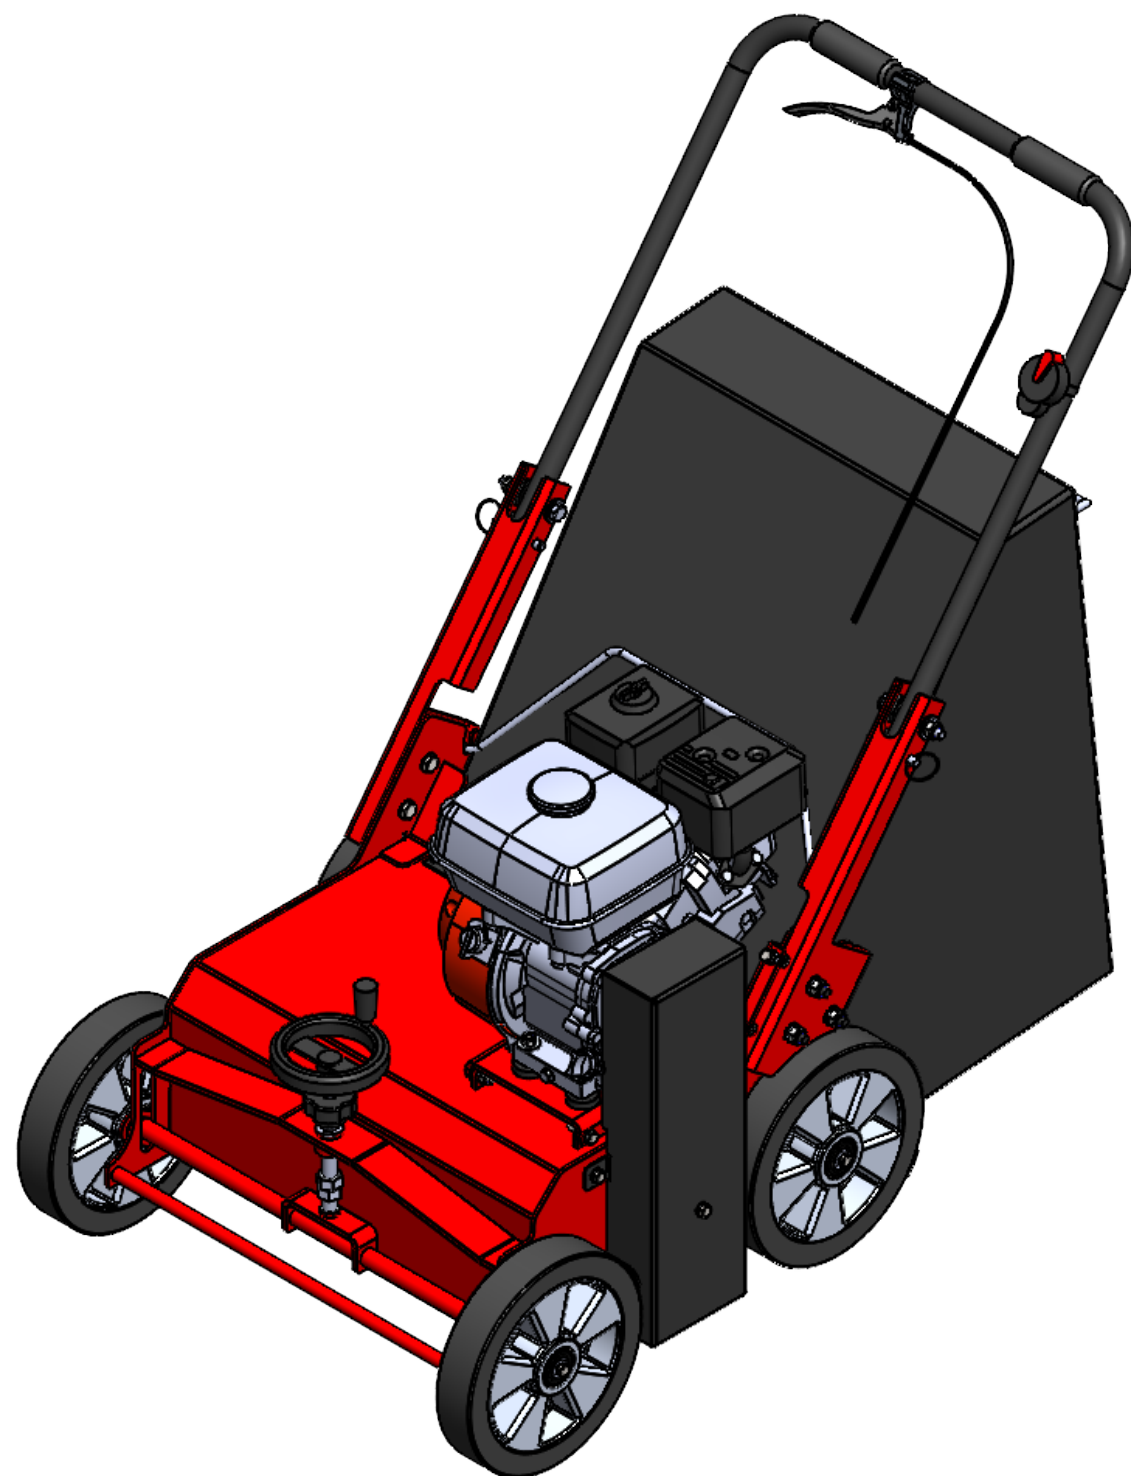


Tracmaster Ltd
Tel: +44 (0) 1444 247689
Order Parts Online:
www.tracmaster.co.uk


Parts Diagram

LS52B1 Lawn Scarifier

VALID FROM	DECEMBER 2019
SERIAL NUMBER	B06-75000
REVISION	JANUARY 2020

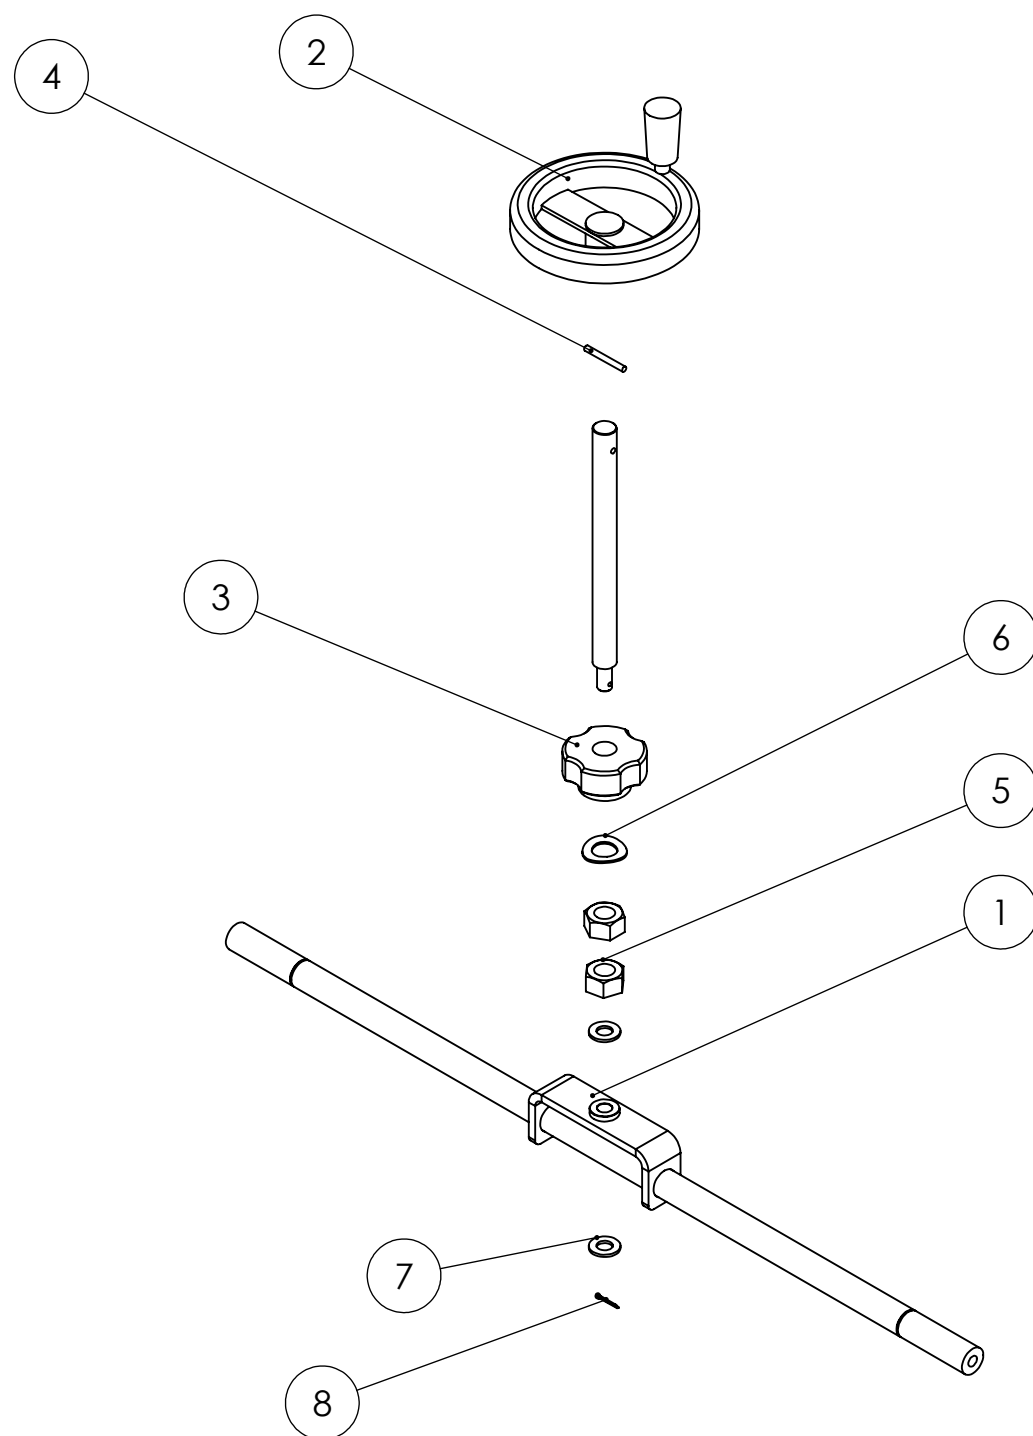

ITEM NO.	PartNo	DESCRIPTION	QTY.
1	60904	Front Axle	1
2	BC0058	Handwheel	1
3	60023	Locking knob	1
4	60809	Roll Pin	1
5	31231160	Nut	2
6	3142 3170	M16 Wavy Washer	1
7	31411105	Plain Washer	2
8	40016	Split Pin	1
9	60814	Height Adjustor	1

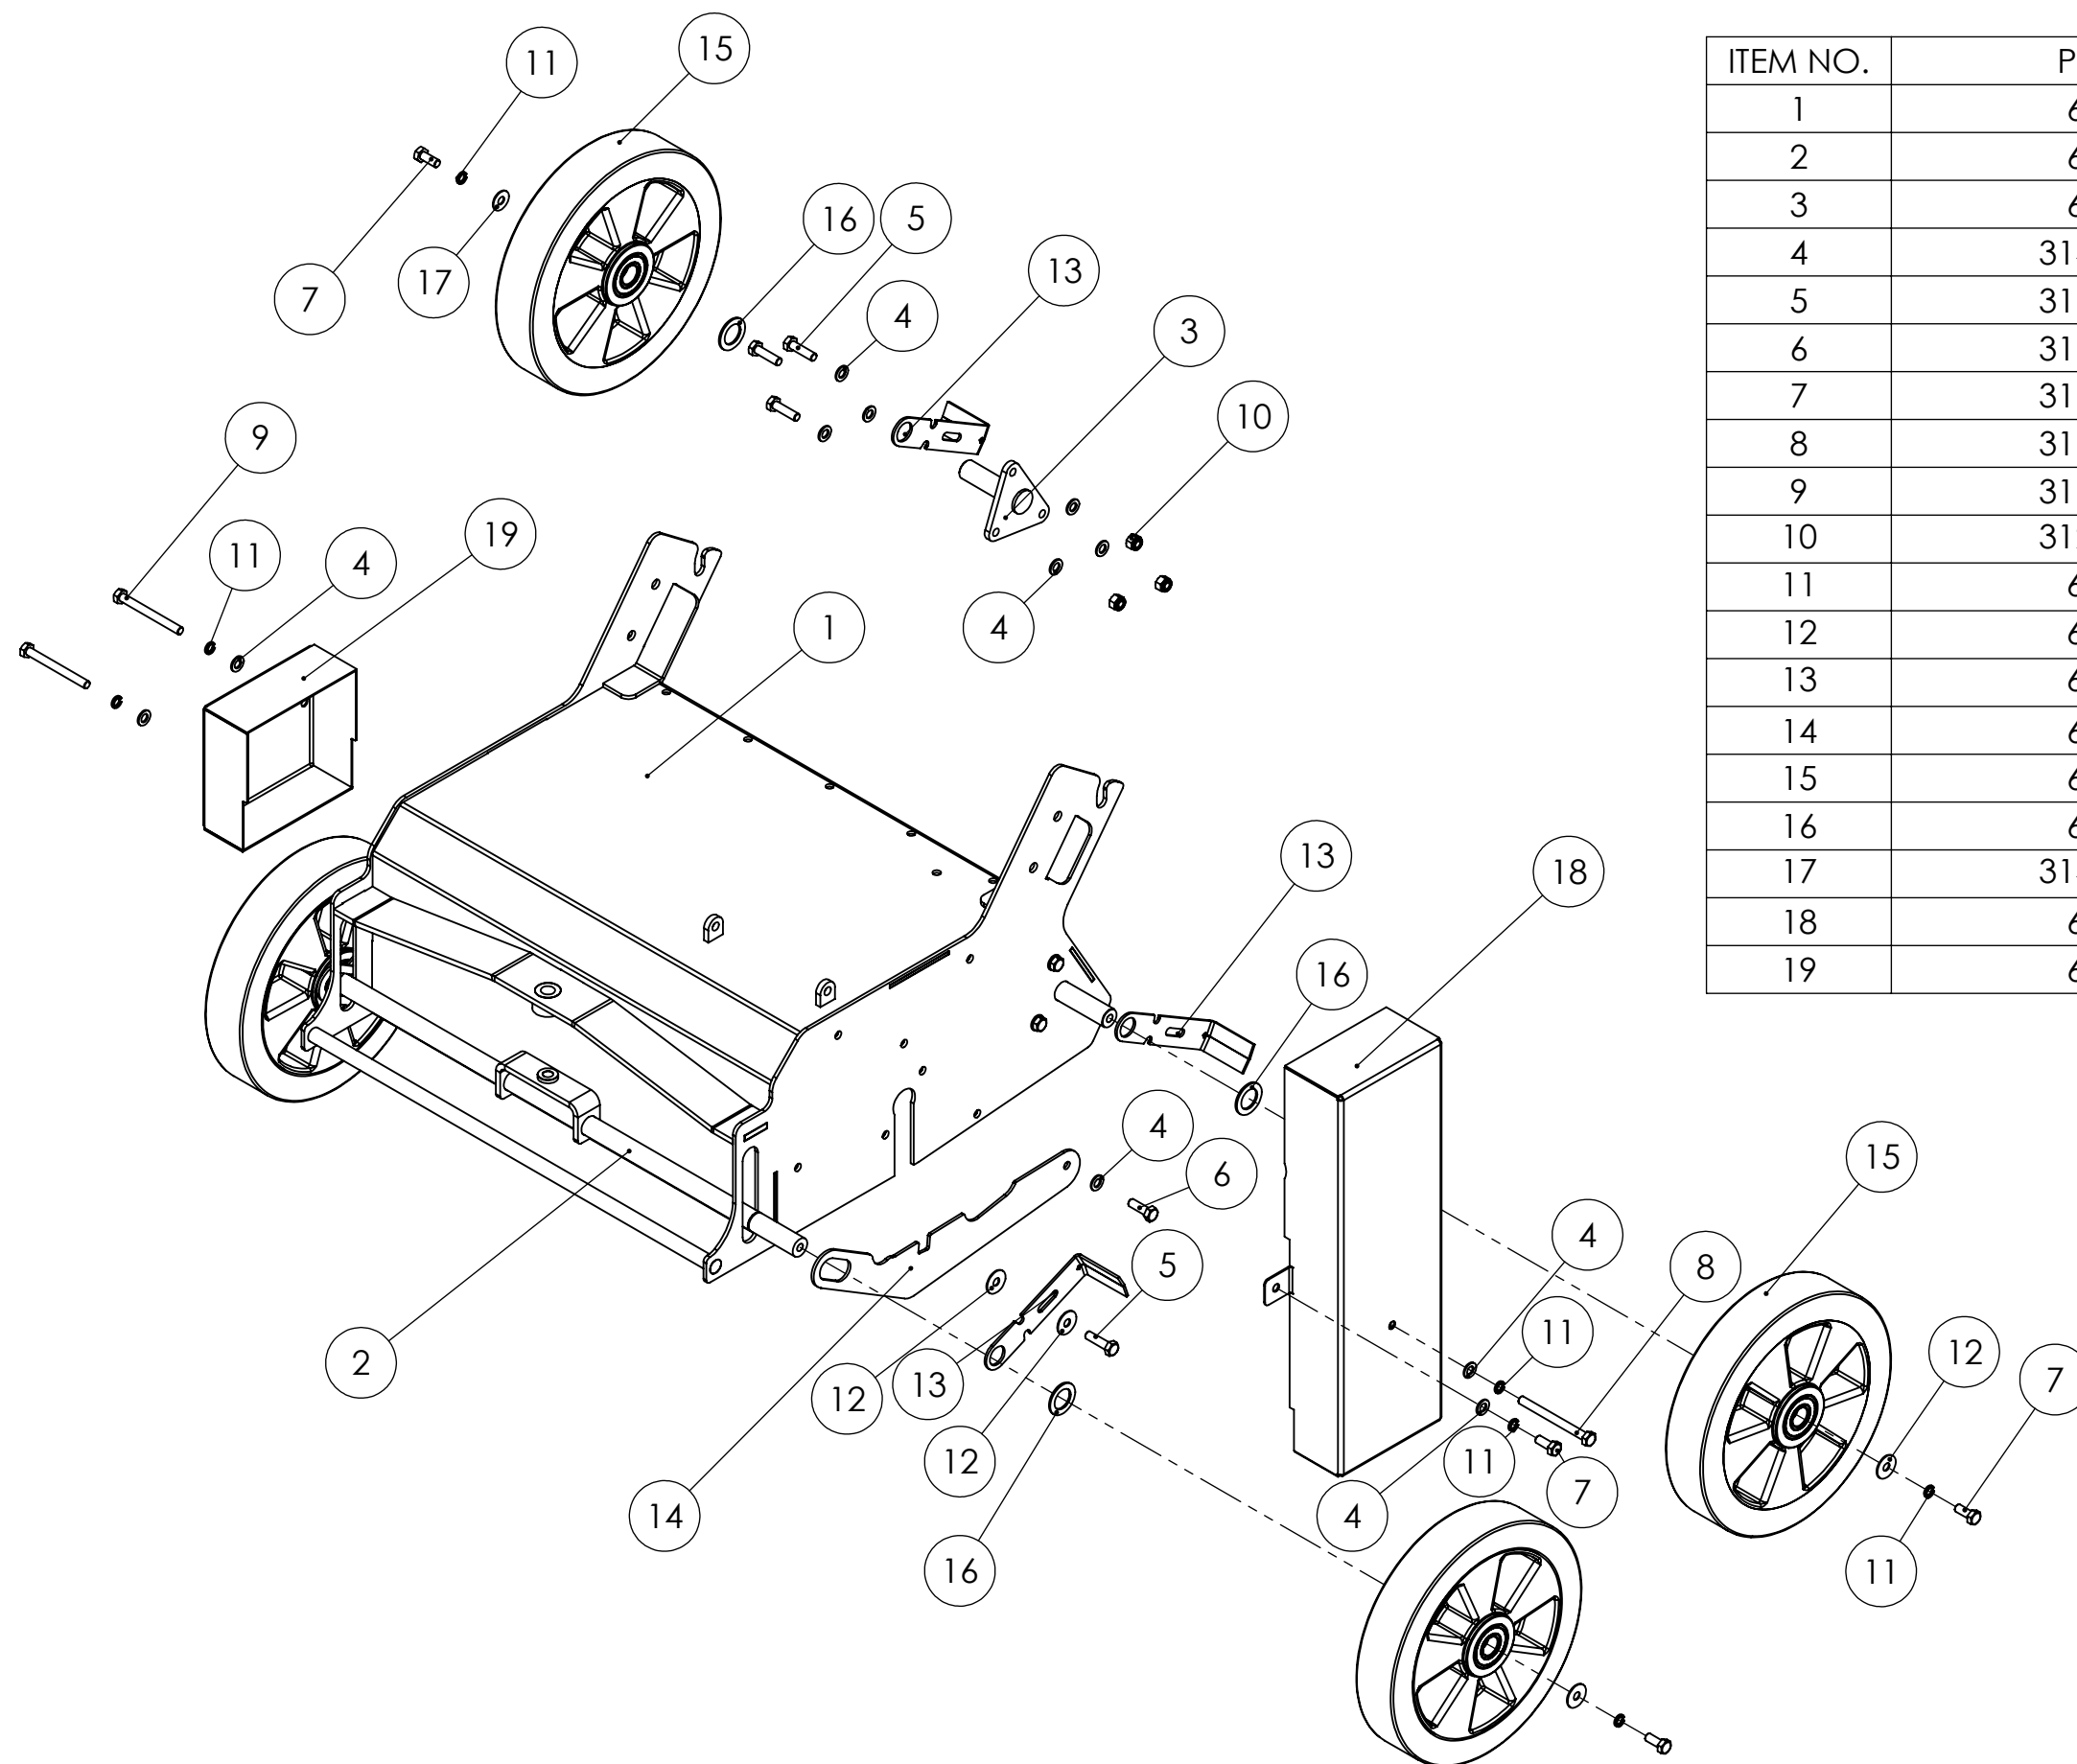

ITEM NO.	PartNo	DESCRIPTION	QTY.
1	60900	LS52 Chassis	1
2	60904	Front Axle	1
3	60806	Rear Axle	2
4	31411084	Washer	19
5	31112152	Hex Bolt	8
6	31112151	Hex Bolt	2
7	31112150	Hex Bolt	6
8	31112158	Hex Bolt	1
9	31112162	Hex Bolt	2
10	31241080	Nyloc	6
11	60075	Spring Washer	9
12	60065	Penny washer	7
13	60817	Wheel Scraper	4
14	60835	Protection Runner	2
15	60805	Wheel	4
16	60063	Form B Washer	4
17	31411066	Penny washer	1
18	60813	Belt Guard	1
19	60822	Rotor shaft cover	1

Tracmaster Ltd
 Tel: +44 (0) 1444 247689
Order Parts Online:
www.tracmaster.co.uk

Parts Diagram

LS52B1 Lawn Scarifier

VALID FROM


DECEMBER 2019

SERIAL NUMBER


B06-75000

REVISION


JANUARY 2020

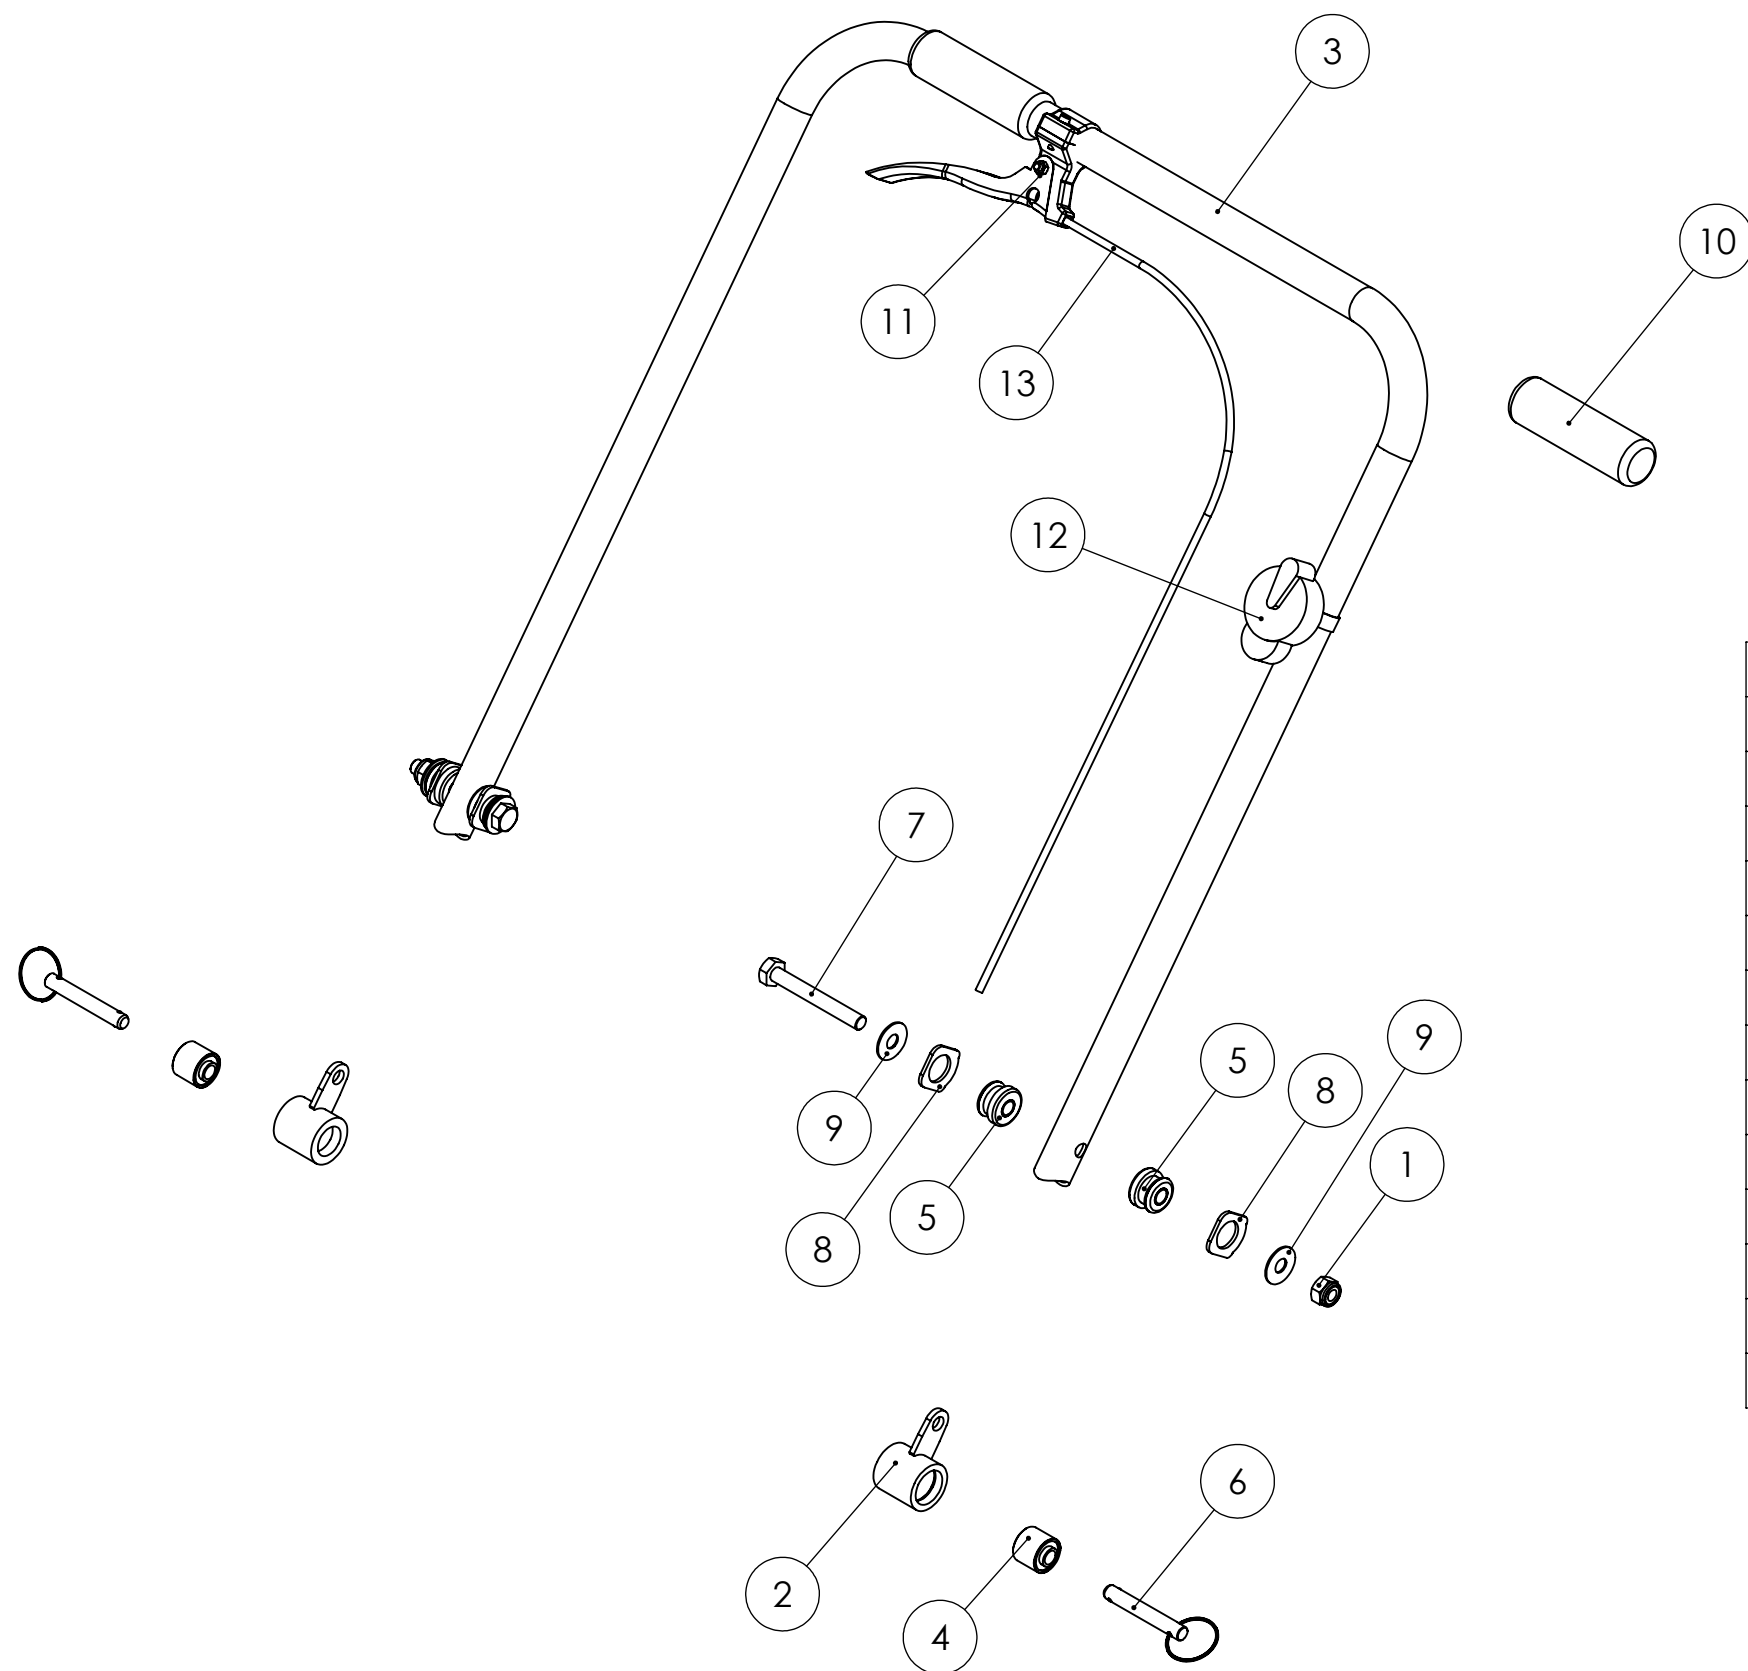

ITEM NO.	PartNo	DESCRIPTION	QTY.
1	31241100	Nyloc	2
2	60812	Connecting Boss	2
3	60901	Top Handlebar	1
4	60832	Bush Vibration Mount	2
5	60807	T-Bush	4
6	203401	Straight Handlebar Pin	2
7	31112217	Hex Bolt	2
8	60825	Internal Washer	4
9	60065	Penny washer	4
10	61111	Open Grip	2
11	13001	Control Lever	1
12	12999	On Off Switch	1
13	60001-2	Cable	1

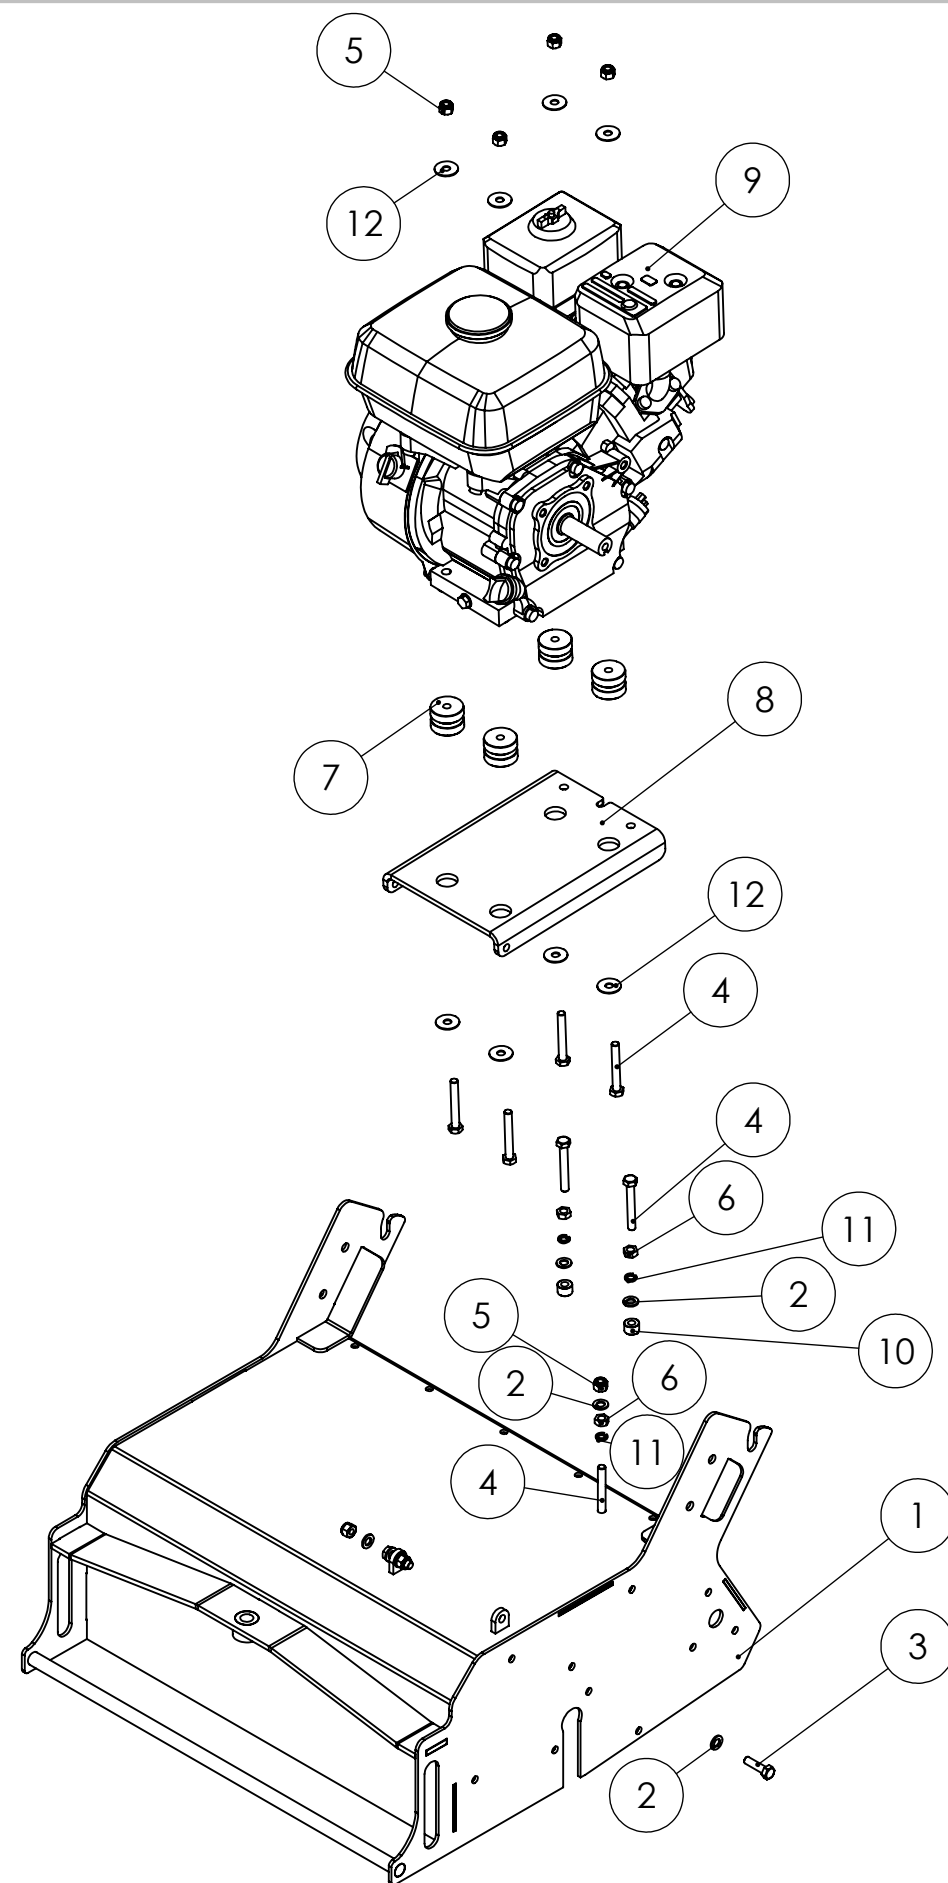

ITEM NO.	PartNo	DESCRIPTION	QTY.
1	60900	LS52 Chassis	1
2	31411084	Washer	7
3	31112152	Hex Bolt	2
4	31112156	Hex Bolt	7
5	31241080	Nyloc	7
6	31211080	Nut	3
7	60826	Engine Vibration Mount	4
8	60808	Engine Plate	1
9	GX200	Honda Engine	1
10	80051	Engine Tension Spacer	2
11	60075	Spring Washer	3
12	60065	Penny washer	8

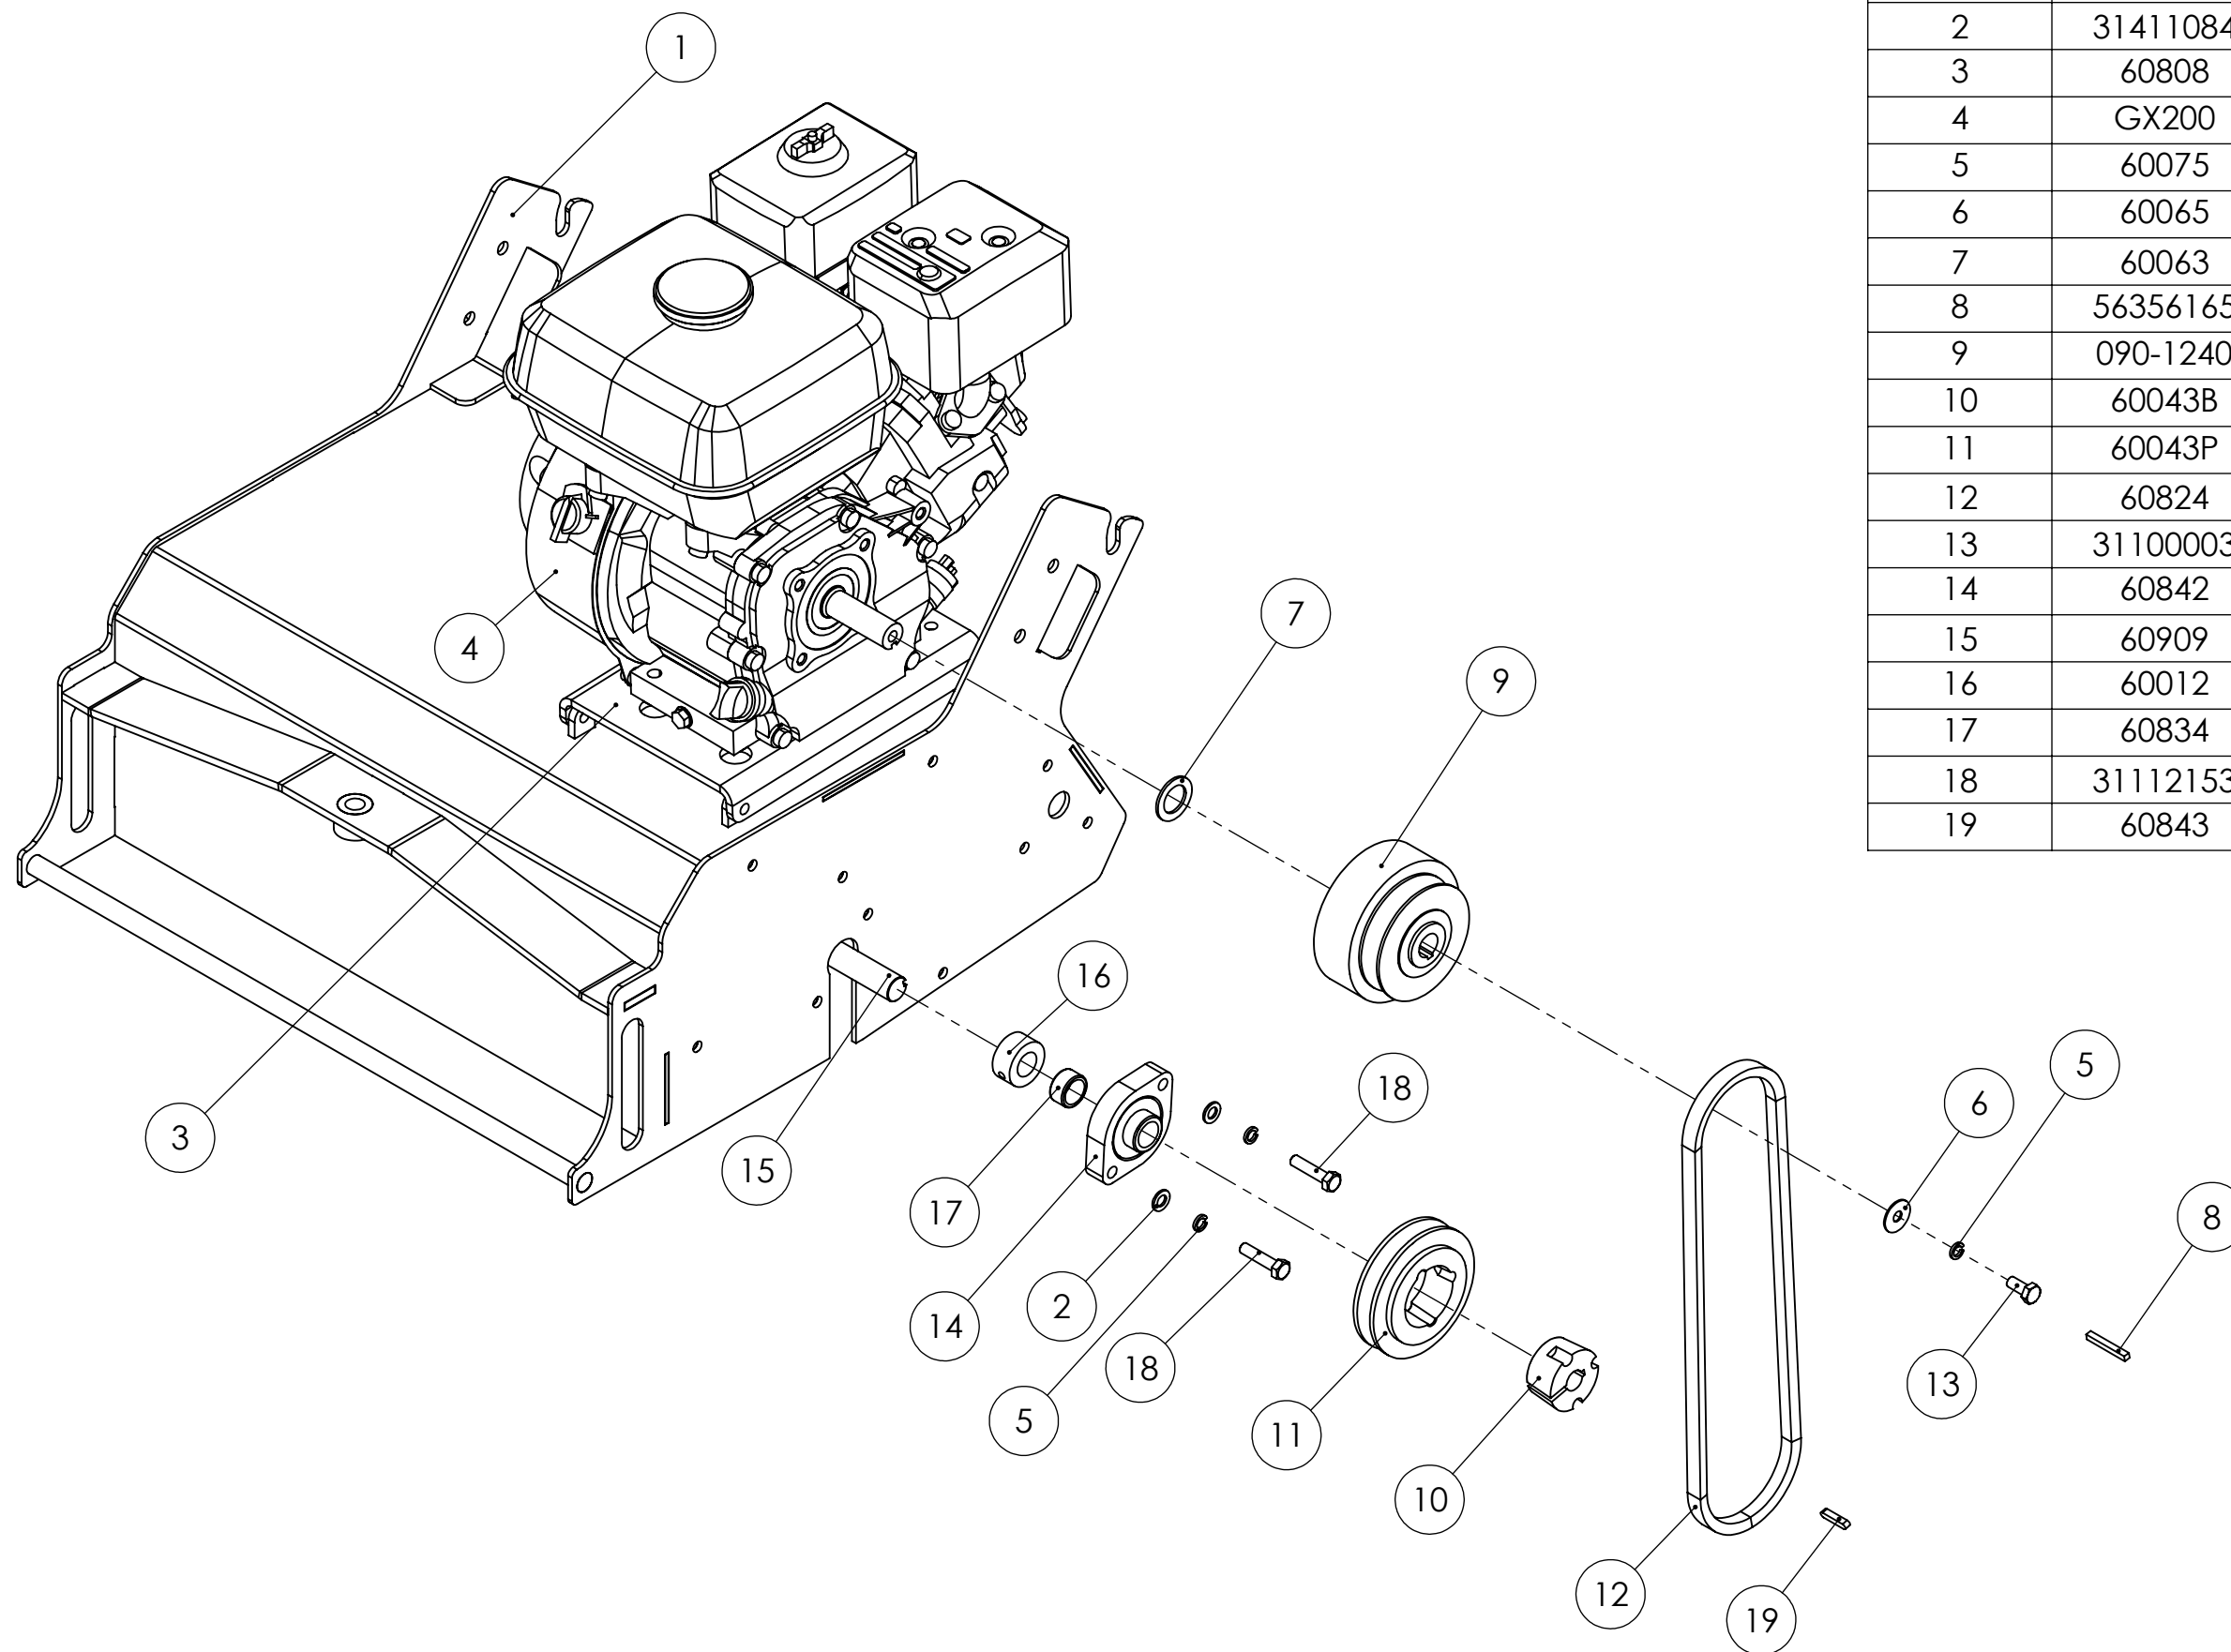

ITEM NO.	PartNo	DESCRIPTION	QTY.
1	60900	LS52 Chassis	1
2	31411084	Washer	4
3	60808	Engine Plate	1
4	GX200	Honda Engine	1
5	60075	Spring Washer	5
6	60065	Penny washer	1
7	60063	Form B Washer	1
8	56356165	Key	1
9	090-1240	Centrifugal Clutch	1
10	60043B	Bushing	1
11	60043P	Pulley	1
12	60824	Belt	1
13	31100003	Hex Bolt	1
14	60842	Bearing & Carrier	2
15	60909	Rotor Shaft	1
16	60012	Rotor Clamp	2
17	60834	Rotor Spacer	2
18	31112153	Hex Bolt	4
19	60843	Key	1

Tracmaster Ltd
 Tel: +44 (0) 1444 247689
Order Parts Online:
www.tracmaster.co.uk

Parts Diagram

LS52B1 Lawn Scarifier

VALID FROM


DECEMBER 2019

SERIAL NUMBER


B06-75000

REVISION


JANUARY 2020

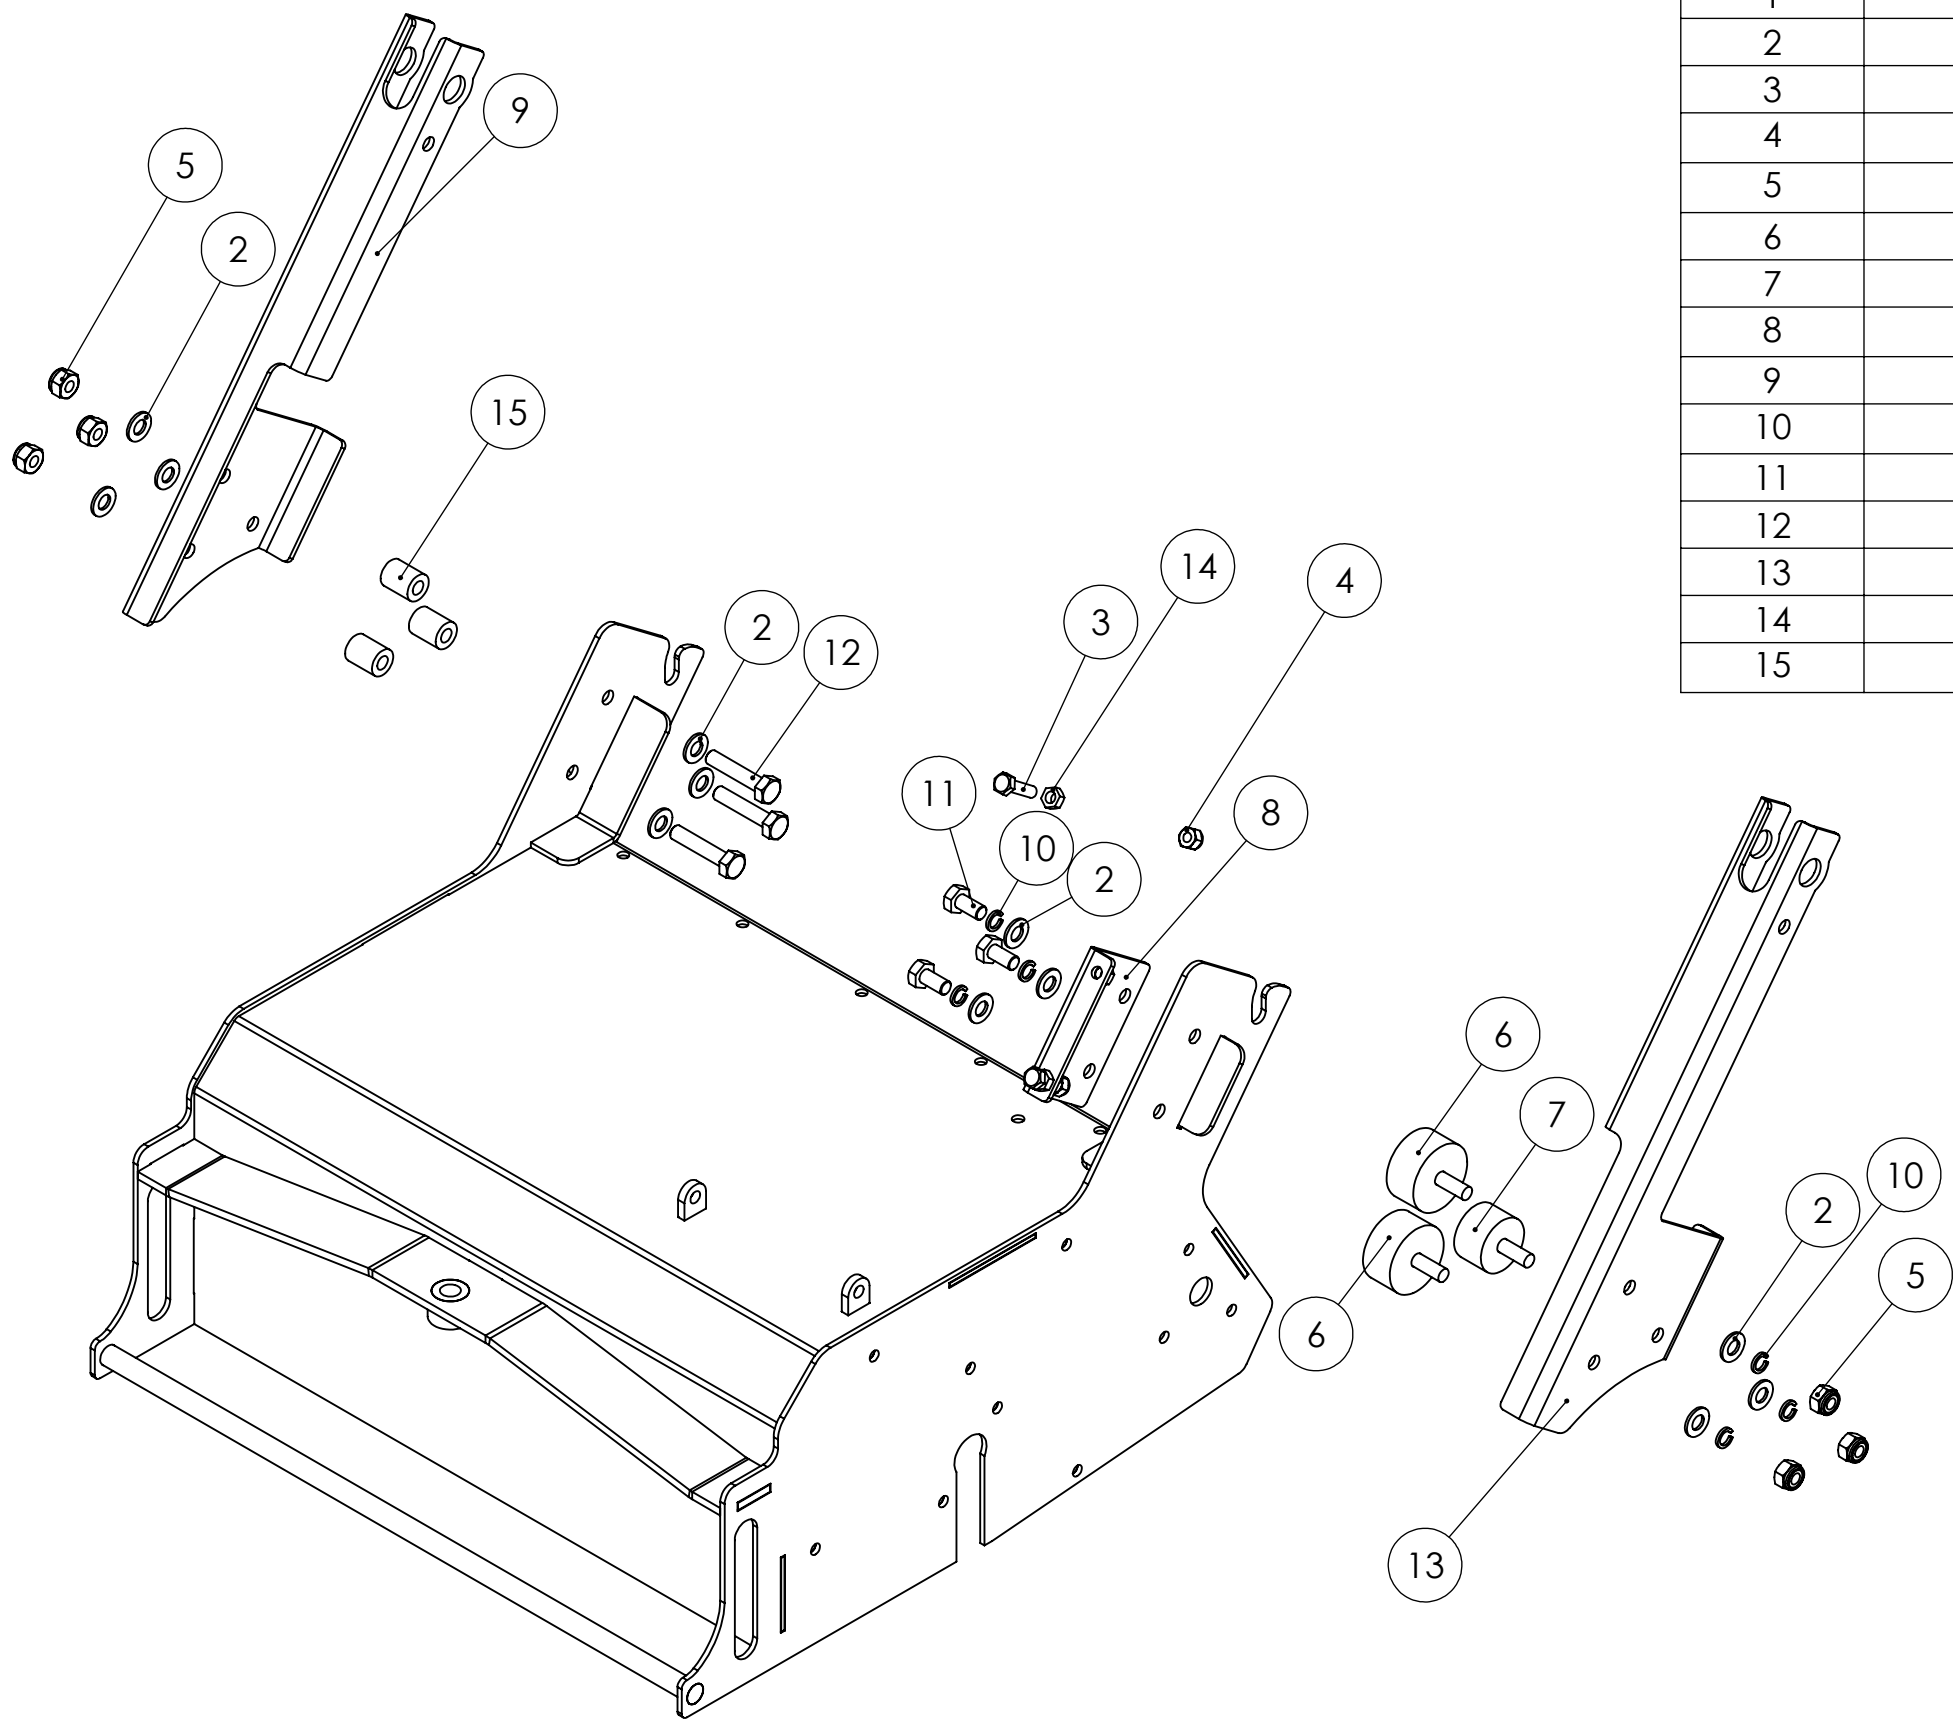

ITEM NO.	PartNo	DESCRIPTION	QTY.
1	60900	LS52 Chassis	1
2	31411105	Plain Washer	12
3	31112152	Hex Bolt	2
4	31241080	Nyloc	2
5	31241100	Nyloc	6
6	60820	50mm Vibration Rubber	2
7	60821	40mm Vibration Rubber	1
8	60816	Chassis Stop	1
9	60802	RH Handlebar Bracket	1
10	TCLAWKS1	Spring Washer	6
11	31112210	Hex Bolt	3
12	70756	Hex Bolt	3
13	60803	LH Handlebar Bracket	1
14	31211080	Nut	2
15	60844	Handlebar Spacer Non AV	3

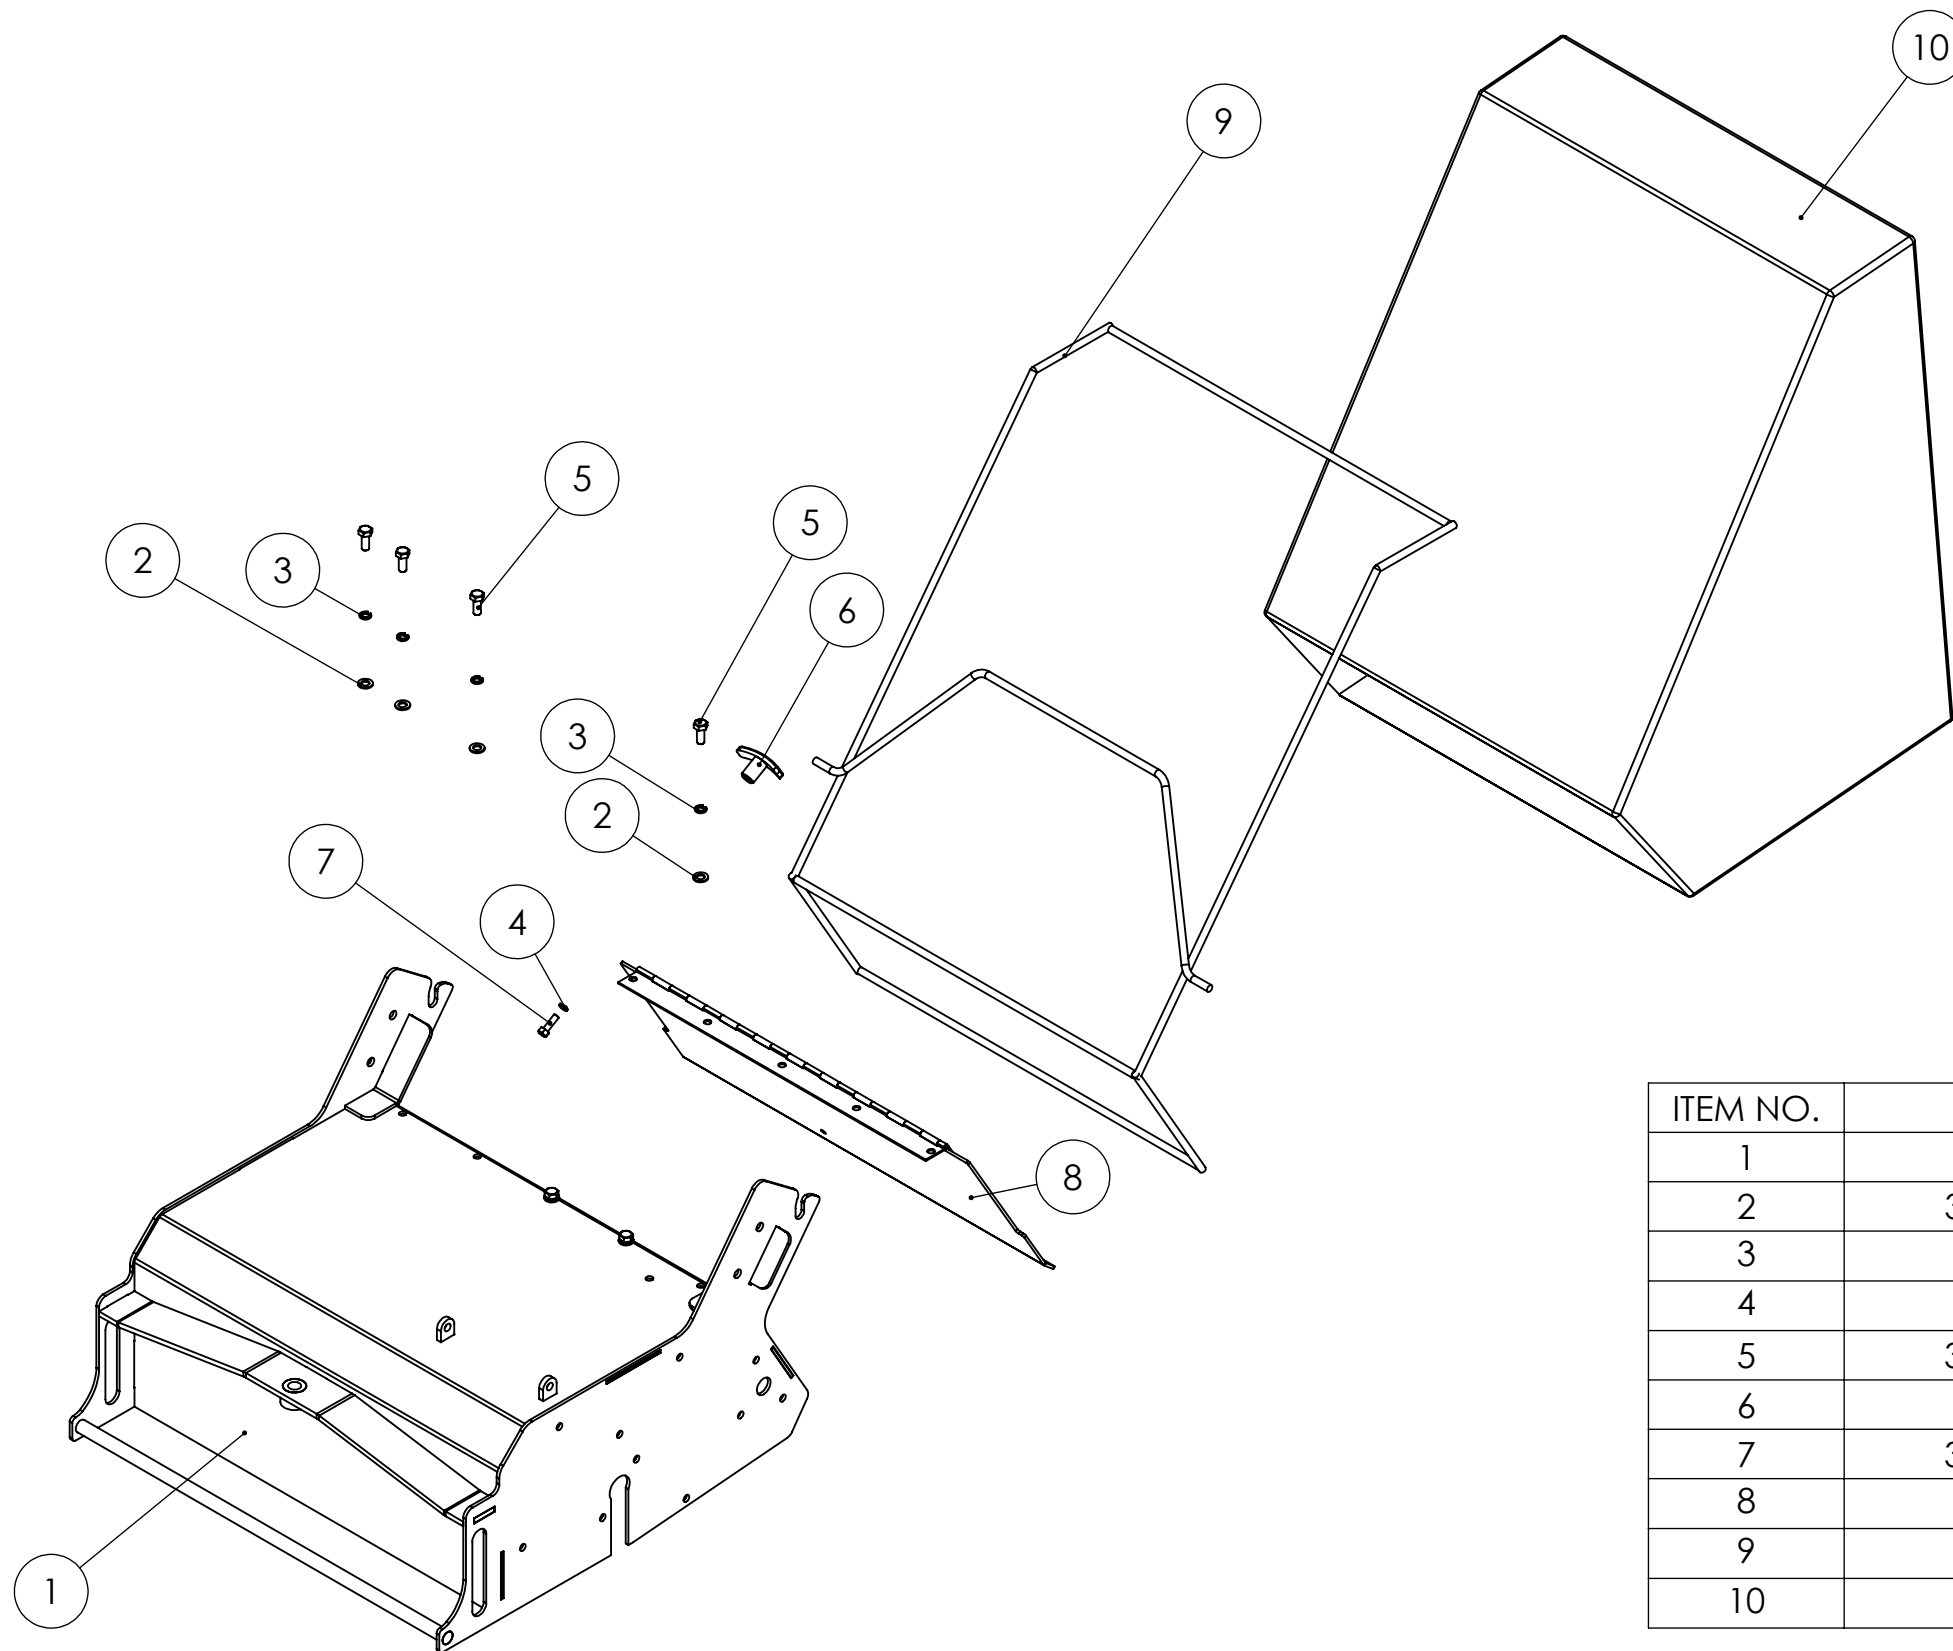

ITEM NO.	PartNo	DESCRIPTION	QTY.
1	60900	LS52 Chassis	1
2	31411084	Washer	6
3	60075	Spring Washer	6
4	60079	Spring Washer	1
5	31112150	Hex Bolt	6
6	60055	Knob	1
7	31112150	Hex Bolt	1
8	60903	Back Flap	1
9	60905	Bag Frame	1
10	60906	Bag	1

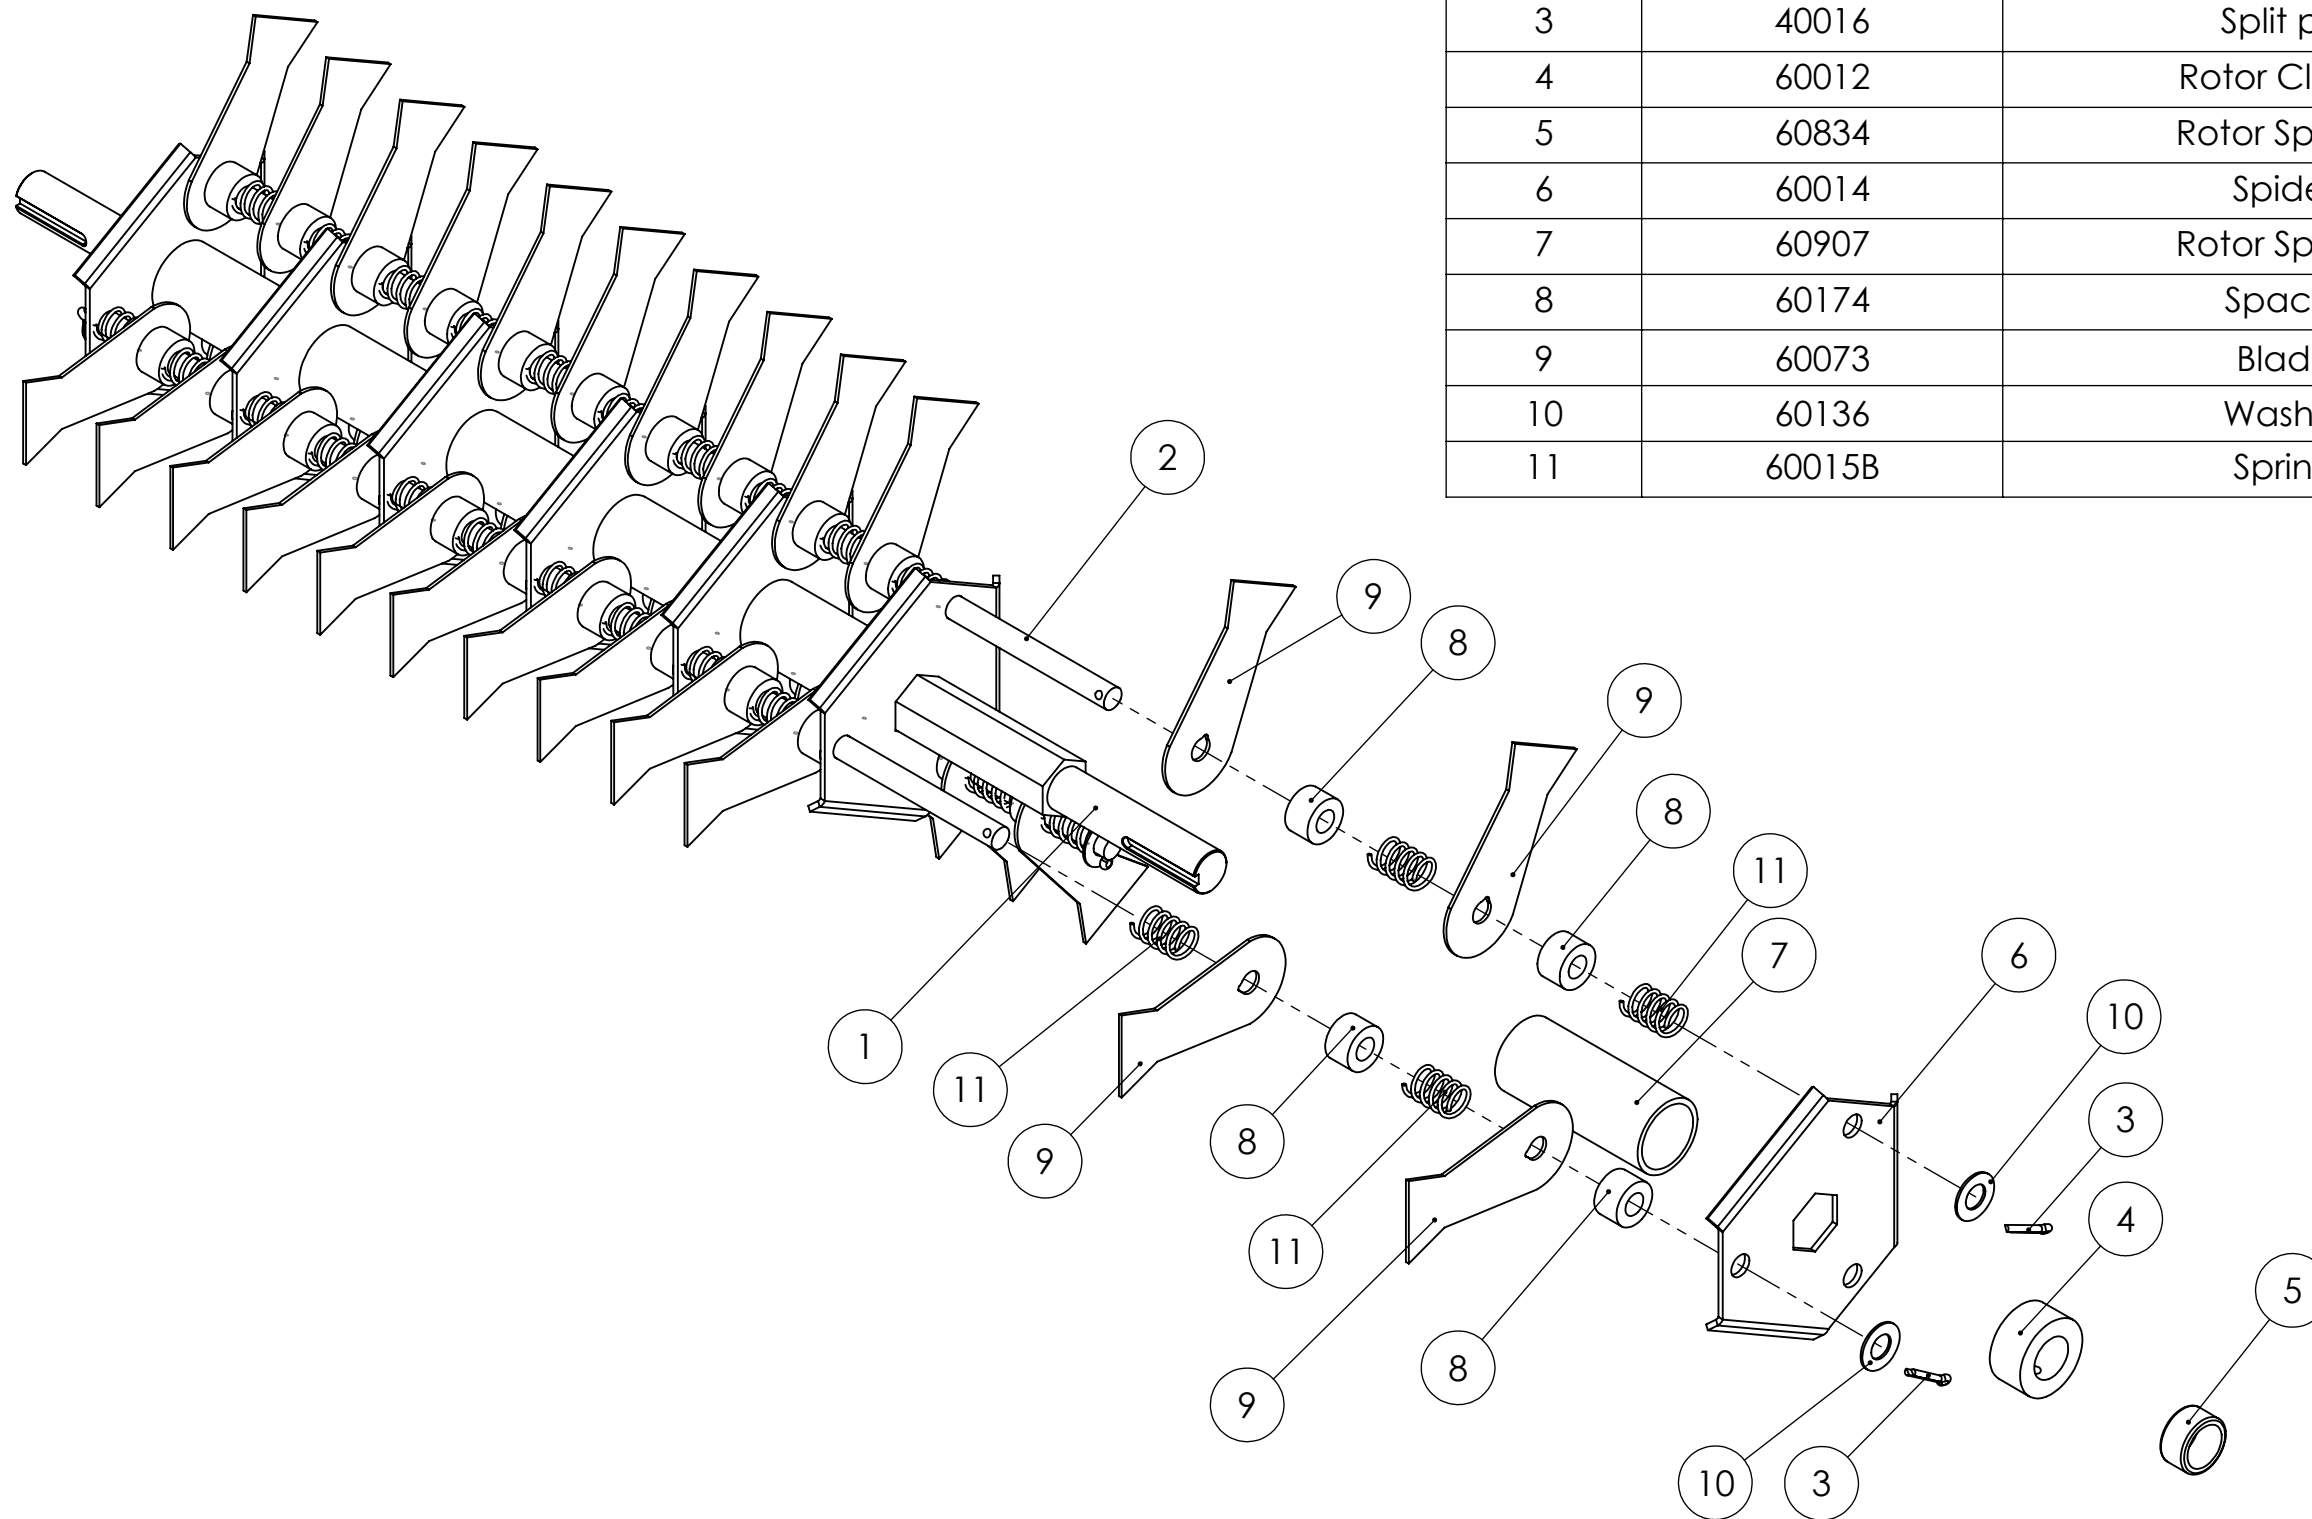

ITEM NO.	PartNo	DESCRIPTION	QTY.
1	60909	Rotor Shaft	1
2	60902	Rod	3
3	40016	Split pin	6
4	60012	Rotor Clamp	2
5	60834	Rotor Spacer	2
6	60014	Spider	7
7	60907	Rotor Spacer	6
8	60174	Spacer	36
9	60073	Blade	36
10	60136	Washer	6
11	60015B	Spring	36

Tracmaster Ltd
 Tel: +44 (0) 1444 247689
Order Parts Online:
www.tracmaster.co.uk

Parts Diagram

LS52B1 Lawn Scarifier

VALID FROM

DECEMBER 2019



SERIAL NUMBER

B06-75000


REVISION


JANUARY 2020

Spacer Layout

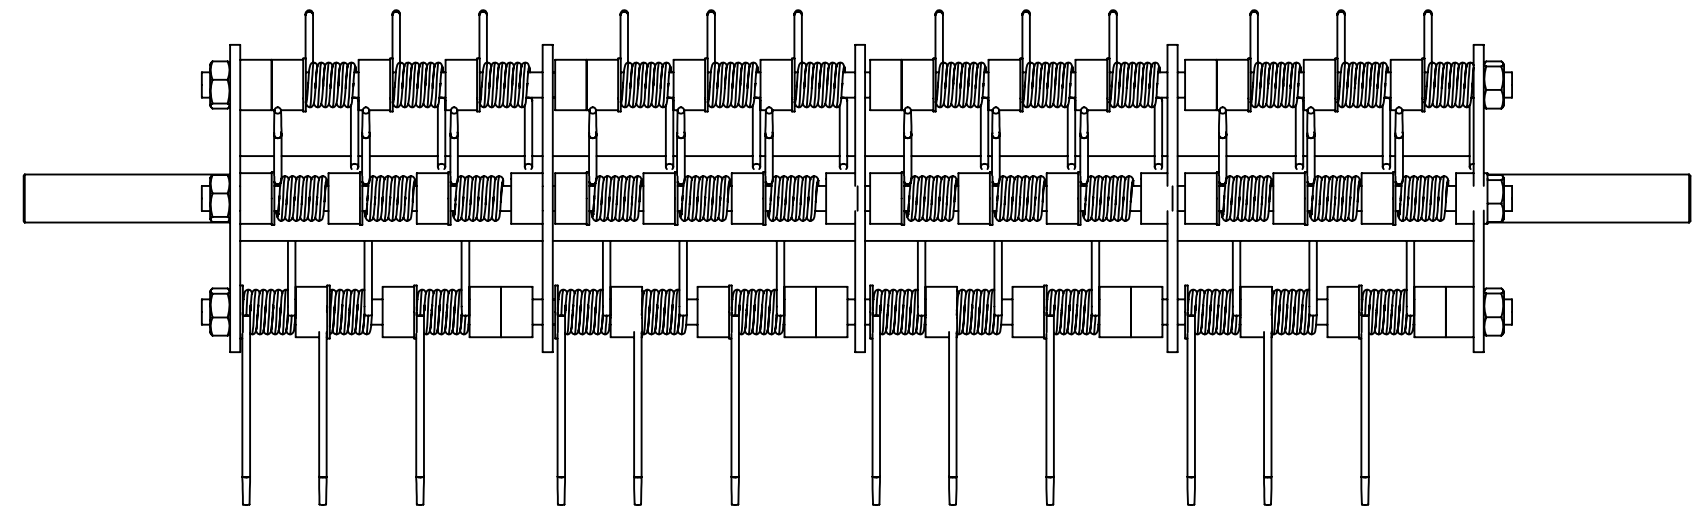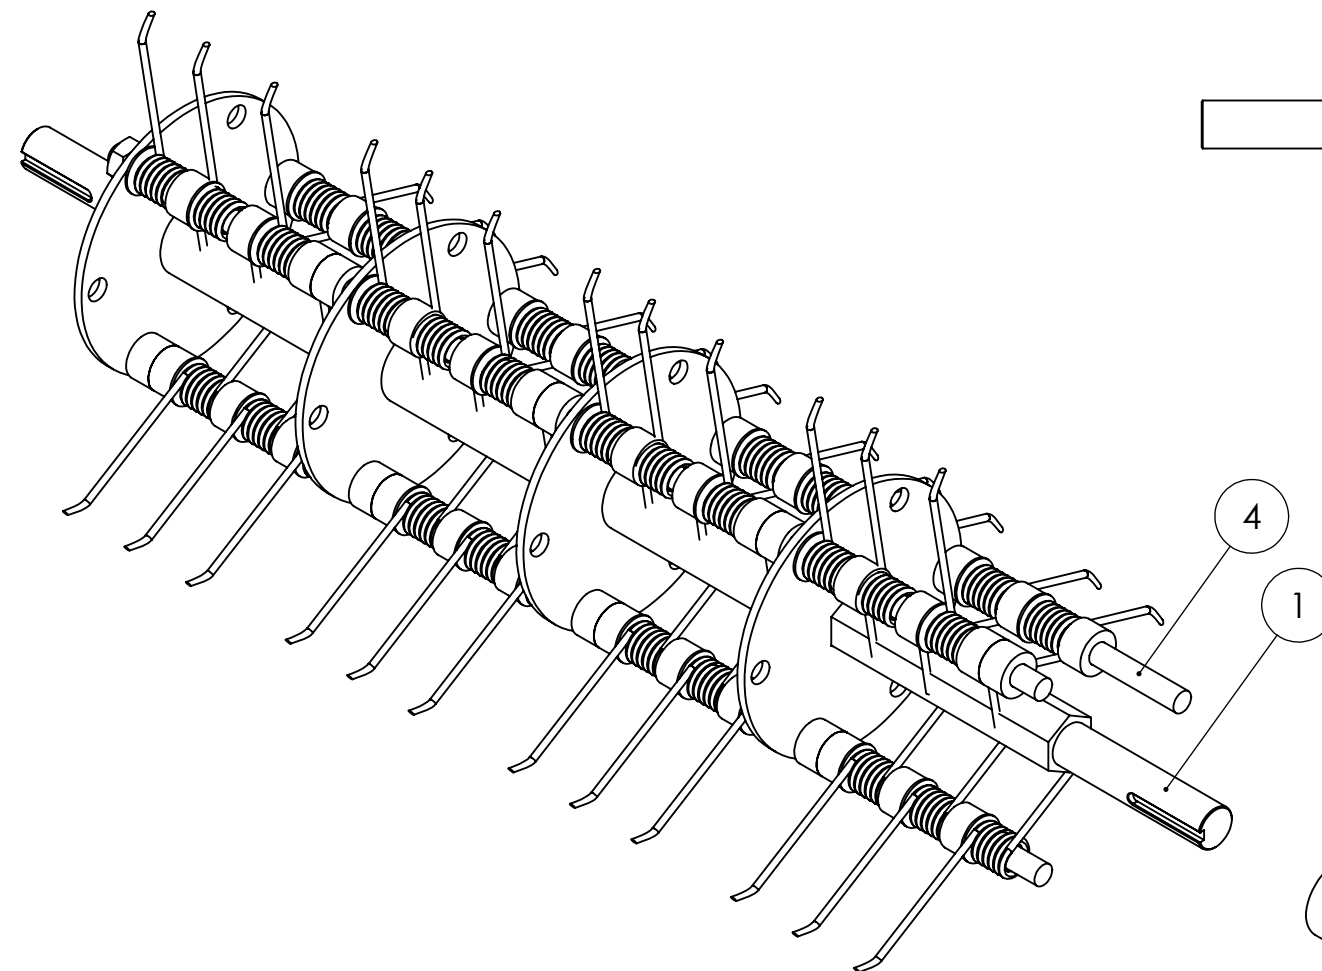


ITEM NO.	PartNo	DESCRIPTION	QTY.
1	60909	Rotor Shaft	1
2	60170	Spring Rotor Spider	5
3	60910	Spacer	4
4	60908	Spring Rotor Rod	3
5	60174	Spacer	48
6	60136	Washer	33
7	60173	Spring Tine	36
8	31241105	Metal Lock	6

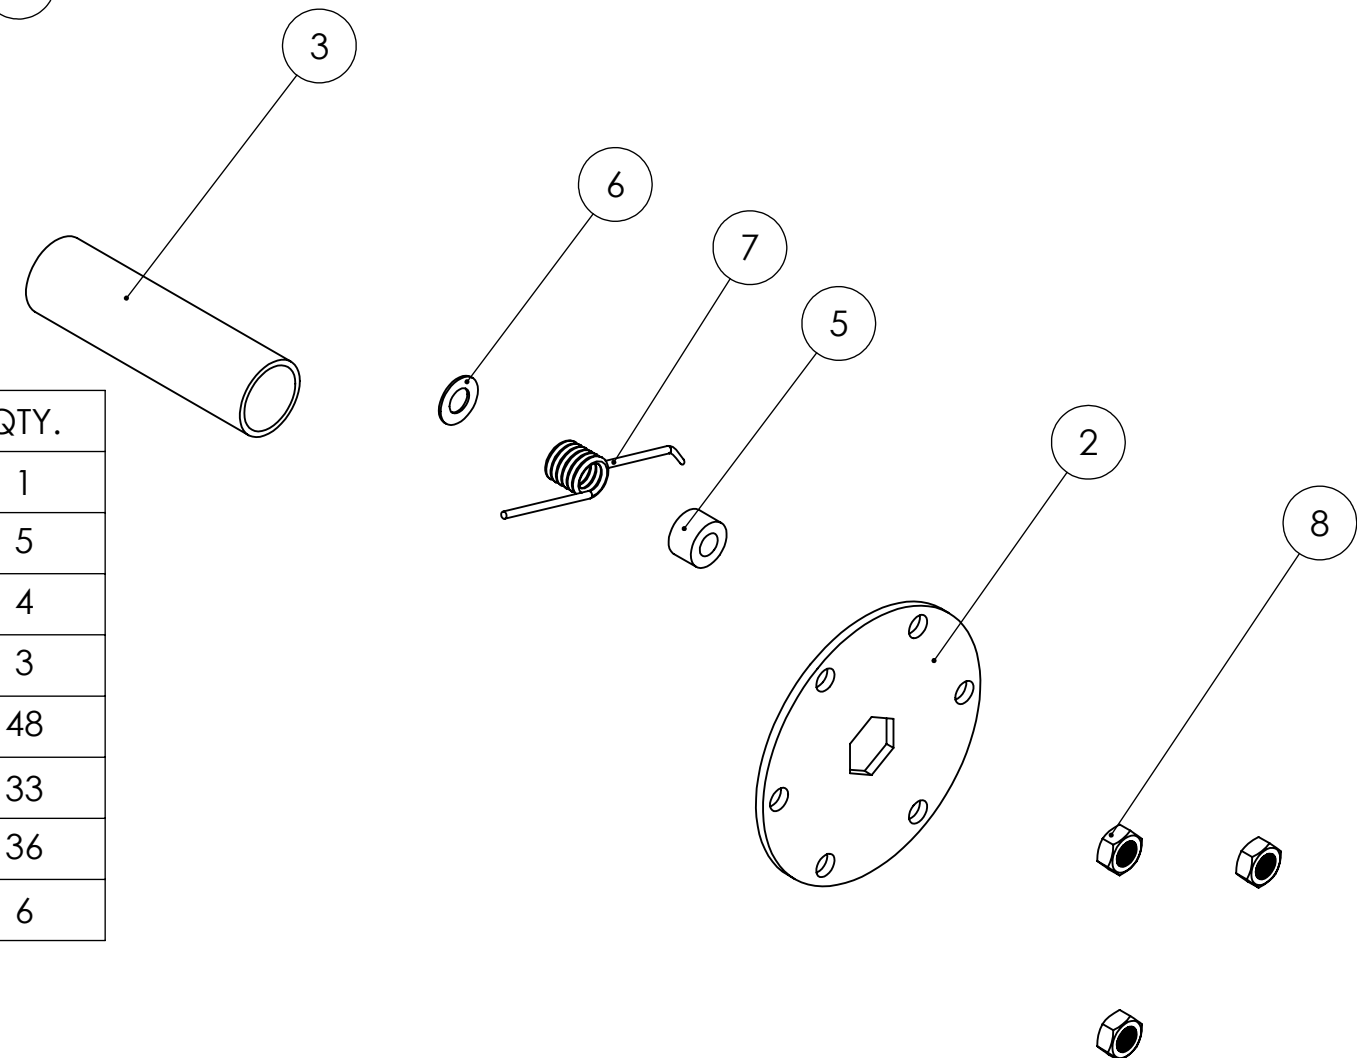


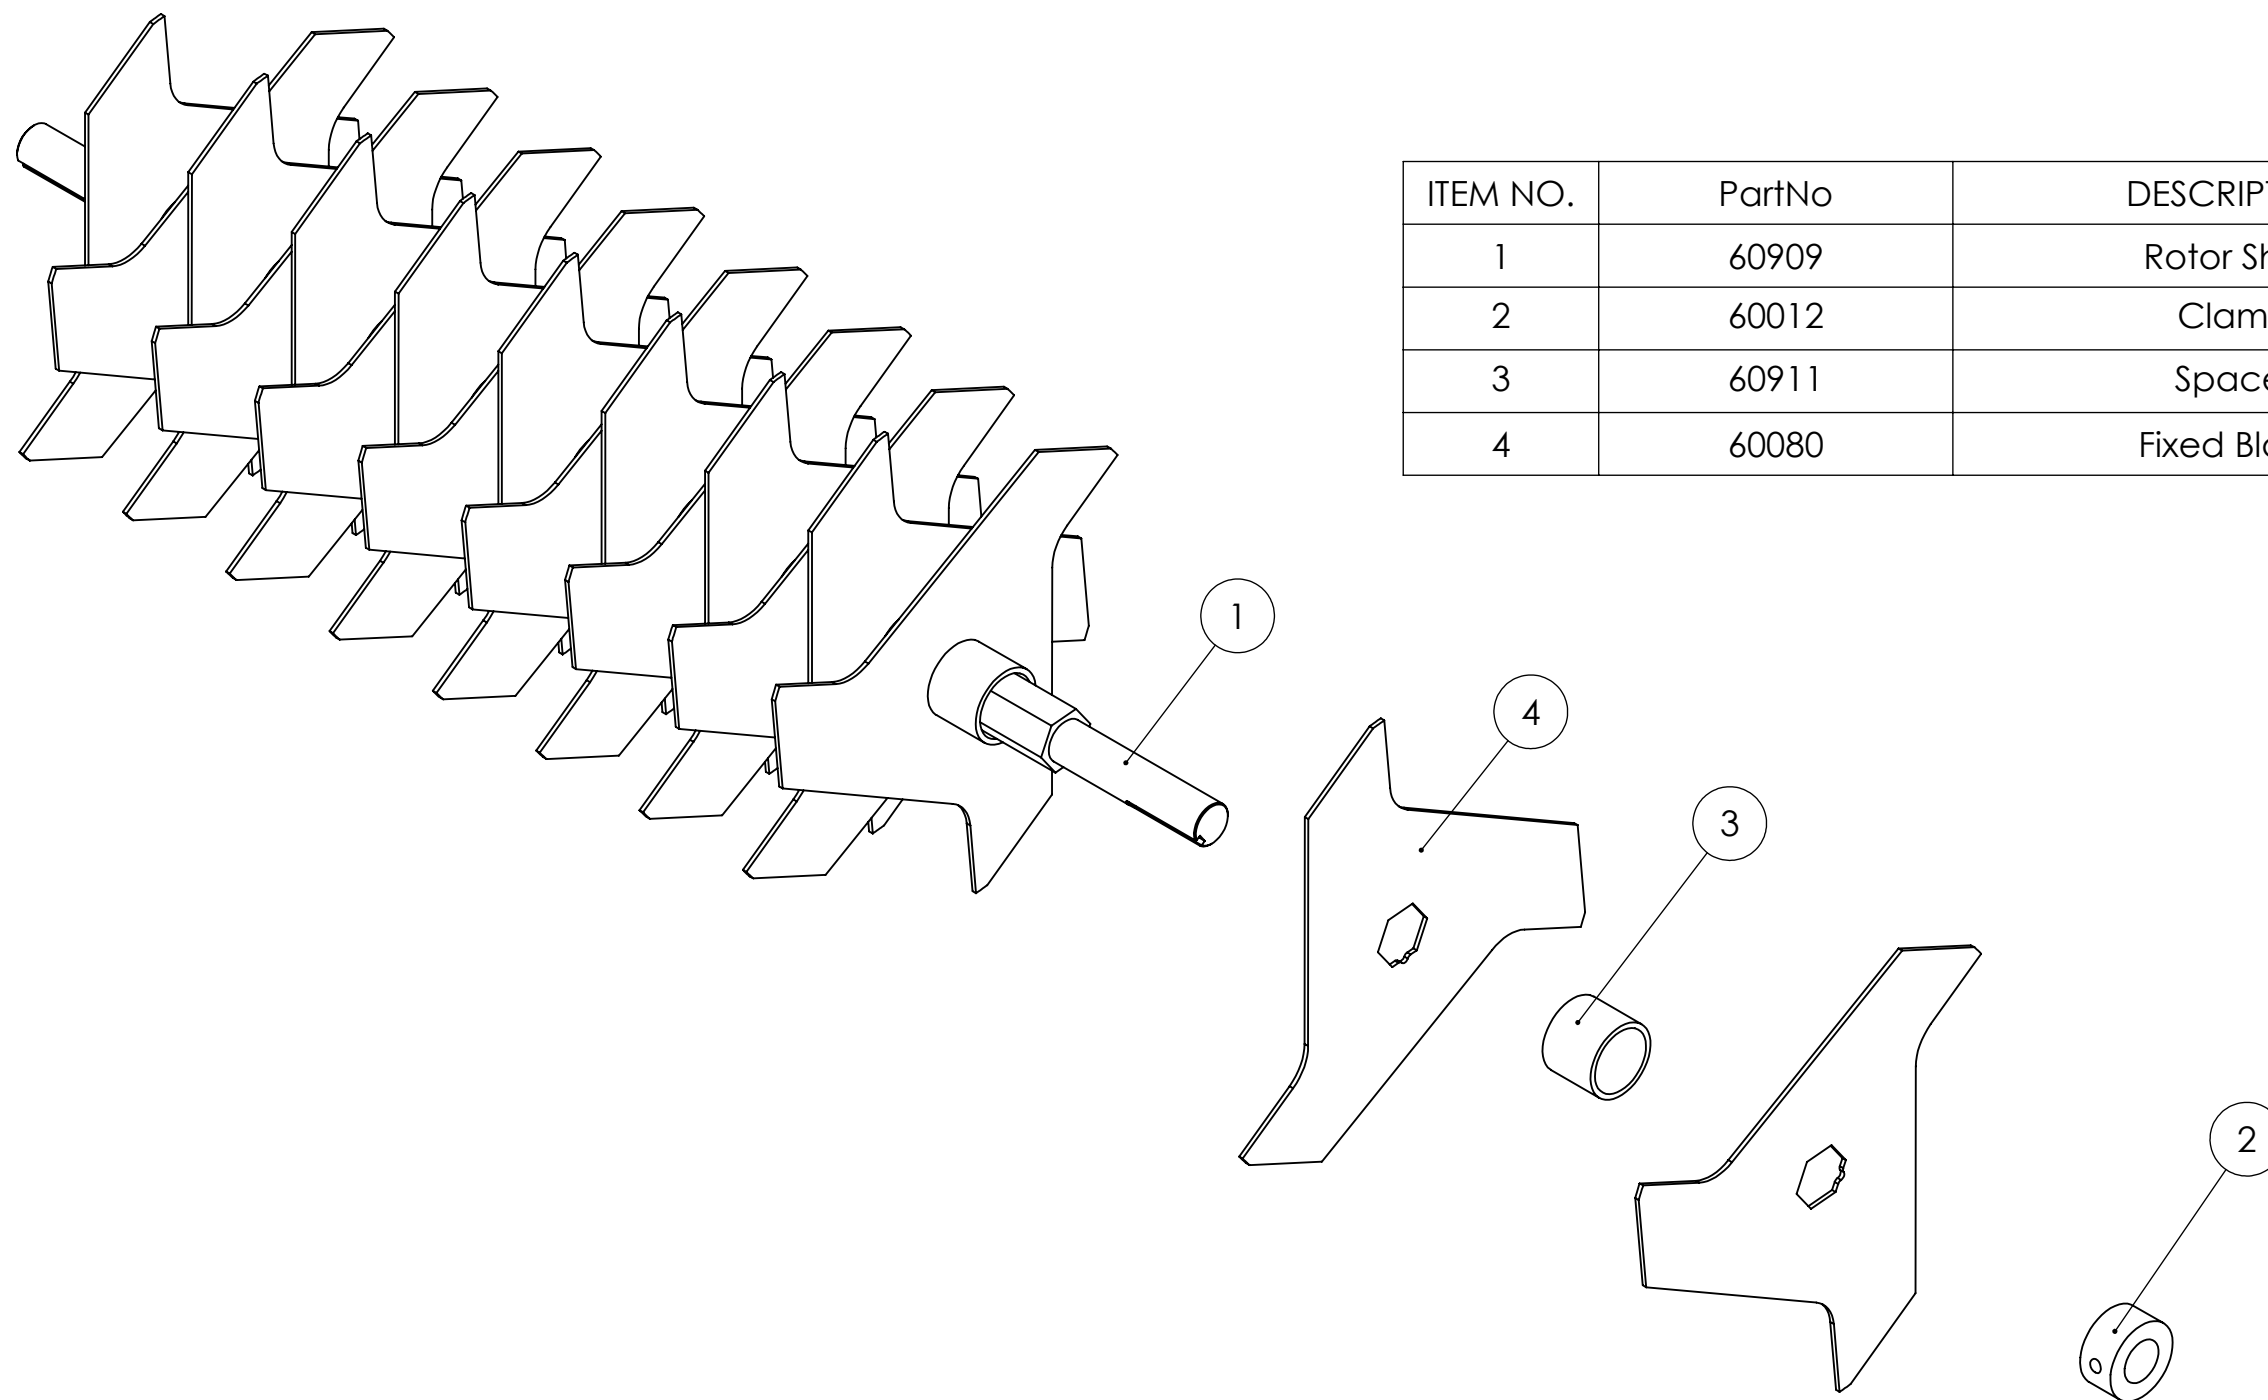

ITEM NO.	PartNo	DESCRIPTION	QTY.
1	60909	Rotor Shaft	1
2	60012	Clamp	2
3	60911	Spacer	17
4	60080	Fixed Blade	18

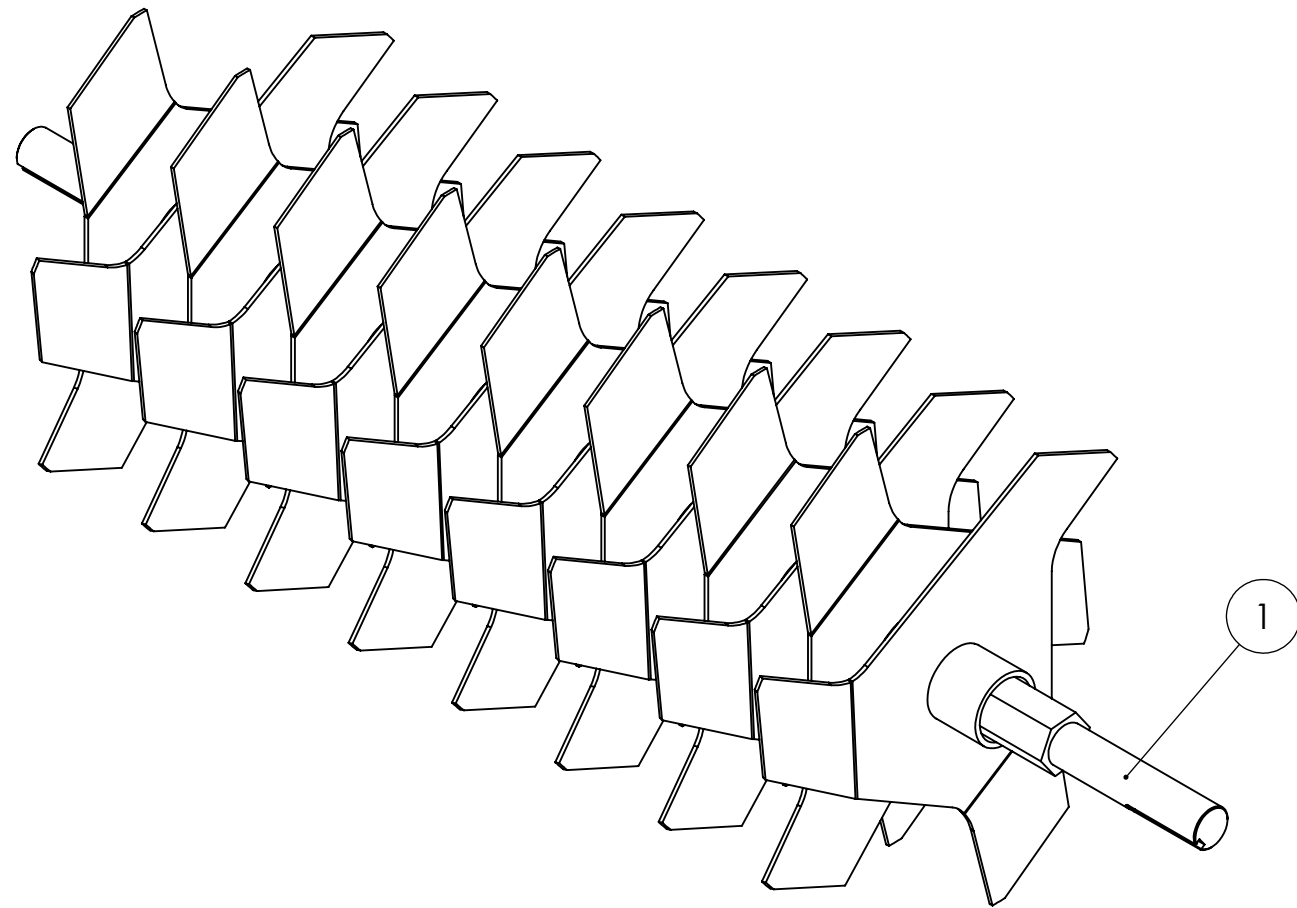

ITEM NO.	PartNo	DESCRIPTION	QTY.
1	60909	Rotor Shaft	1
2	60012	Clamp	2
3	60082	Fixed Blade	18
4	60911	Spacer	17

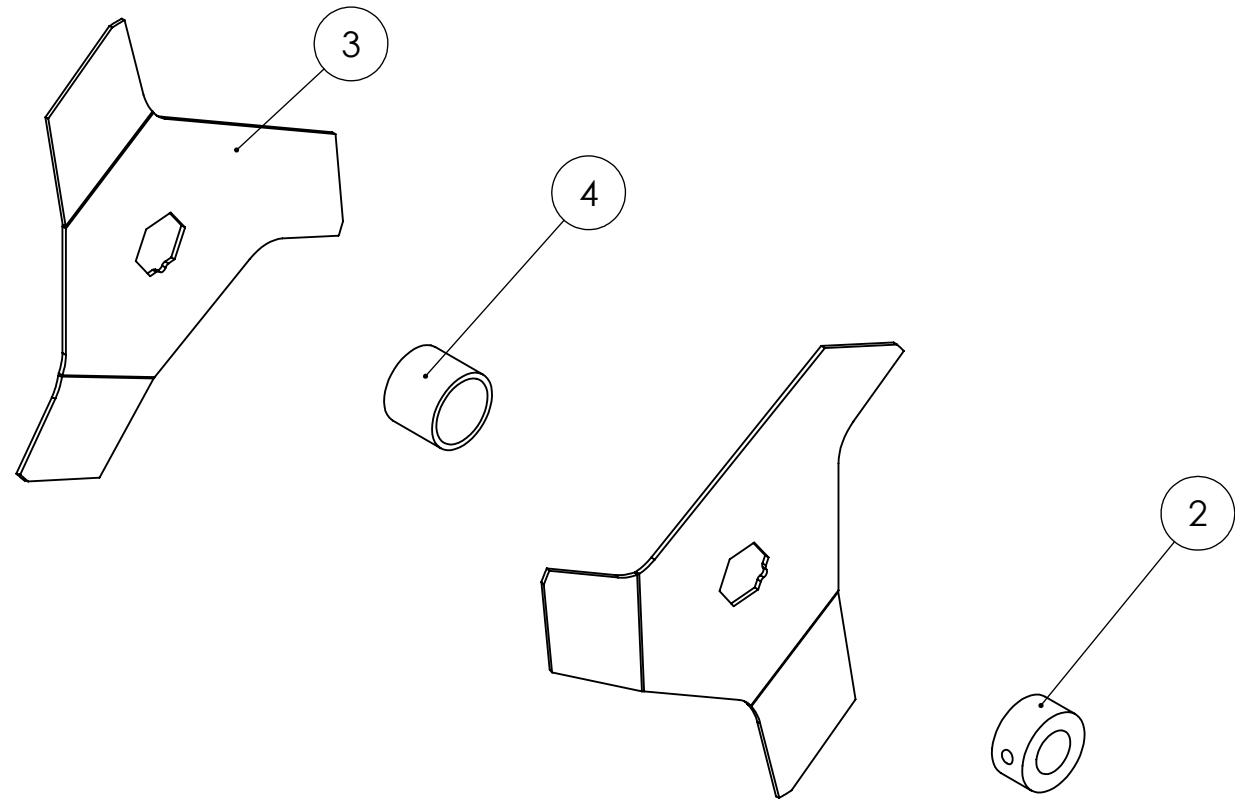



WARNING

**DO NOT
OPERATE
WITH GUARD
REMOVED.**

90998

**GREASE
POINT**

811030



A collection of safety pictograms. On the left, four blue circular icons: headphones, glasses, a boot, and gloves. Below them is a white rectangular box with a black border containing a speaker icon, the text 'LWA', and '101 dB'. On the right, a 3x2 grid of yellow square icons with black borders: a warning triangle with an exclamation mark, an open book, a hand plugging an ear, a hand plugging an ear with a cable, a person slipping, and a person with a double-headed arrow indicating distance.

A yellow triangular warning sign with a black border. Inside the triangle, there is a black silhouette of a hand holding a tool, possibly a wrench, near a rotating blade. The blade is depicted with several vertical lines indicating its rotation. To the right of the triangle, there is a black rectangular box with the word "WARNING" in white, bold, capital letters. Below this box, the text "Rotating blade hazard." is written in black, followed by "Do not operate with guard removed." and "Always remove the spark plug before servicing." in a smaller font.

 **TRACMASTER**
The landscape machinery specialists
Units 6-7 Winterpick Business Park | Hurstpierpoint Road | Wineham | Henfield | BN5 9BJ | UK
T: +44 (0) 1444 247689 | www.tracmaster.co.uk



WARNING
Rotating blade hazard.
Do not operate with guard removed.
Always remove the spark plug before servicing.



WARNING
Rotating blade hazard.
Do not operate with guard removed.
Always remove the spark plug before servicing.



WARNING
Rotating blade hazard.
Do not operate with guard removed.
Always remove the spark plug before servicing.





LWA
101 dB



WARNING
Rotating blade hazard.
Do not operate with guard removed.
Always remove the spark plug before servicing.



WARNING
Rotating blade hazard.
Do not operate with guard removed.
Always remove the spark plug before servicing.



 
WARNING
Rotating blade hazard.
Do not operate with guard removed.
Always remove the spark plug before servicing.




WARNING
Rotating blade hazard.
Do not operate with guard removed.
Always remove the spark plug before servicing.



WARNING
Rotating blade hazard.
Do not operate with guard removed.
Always remove the spark plug before servicing.



 WARNING
Rotating blade hazard.
Do not operate with guard removed.
Always remove the spark plug before servicing.



WARNING
Rotating blade hazard.
Do not operate with guard removed.
Always remove the spark plug before servicing.

Unit: 6-7 Oldscaple Business Park, Huddersfield Road, Wetherby, West Yorkshire LS23 7JL, UK
T: +44 (0) 1454 247800 | www.landscape-lawn.co.uk



CAMON LS52

JANUARY 2020