

140FA engine 4-stroke spare parts list

No.	Description
1	Flange screw M5X15
2	Cylinder cover
3	Flange screw M5×12
4	Air valve cover
5	oil-gas separator
6	Cylinder cover group
7	Bolt unit M4X8
8	Seal ring
9	Seal ring for valve cover
10	Air valve spring plate
11	Air valve spring
12	Exhaust rocker set
13	Air inflow rocker set
14	Rocker pin
15	Exhaust rocker block
16	Air inflow rocker block
17	Synchronous belt
18	Cam gear
19	Cam pin
20	Start driving plate
21	Starter
22	Flat gasket for inlet pipe
23	Small snap ring
24	Silencer guard
25	Flange nut M5
26	Bolt combination M5X55
27	Silencer
28	Muffler baffle
29	Sparking plug
30	Cylinder
31	High-voltage cable clamp
32	Stator
33	Bolt combination M4X14
34	Stop line
35	Exhaust valve
36	Intake valve
37	Balance air pipe
38	Small snap ring (A)
39	Seal ring for intake tube
40	Bolt M5X55
41	Part for intake pipe
42	Exhaust pipe

	T
No.	Description
43	Carburetor mat
44	Carburetor
45	Filter inner cover set
46	Flange screw M5X22
47	Filter
48	Filter outer cover
49	Piston ring set
50	Piston ring set second
51	Doctor blade
52	Cushion spring
53	Piston
54	Crankshaft assembly
55	Gudgeon pin
56	Pinion oil seal
57	Oil level indicator
58	O-ring 14X2.65
59	woodruff key 3X5X13
60	Big oil seal
61	Spring set
62	Rotor
63	Nut M8
64	Gasket B
65	Tight block combination
66	Wave washer
67	Screw axle
68	Pin B4X8
69	Motor cover
70	Crankcase below
71	Flange screw M5X32
72	Fuel tank cap
73	Admission piece
74	Inner tank cover
75	End cover
76	Gland
77	Rubber bumper Block
78	Fuel tank
79	Tubing stopper
80	Oil return pipe
81	Oil inlet tube
82	Fuel filter
82 83	Fuel filter Piston pin retainer

